

SUPRENT

Refine Grooming, Redefine Yourself.

It's up to you to define the
right way to groom.

THE PHANTOM
PROFESSIONAL
HAIR CLIPPERS HC614

IF YOU NEED A MORE DETAILED
MULTILINGUAL MANUAL VERSION
(US/CA/EU/UK/JP), PLEASE SCAN THE
FOLLOWING OFFICIAL QR CODE.



SCAN & GET EXTRA WARRANTY

 


✉ support@suprent.com

🌐 www.suprent.com

Beyond Master


SPECIFICATIONS

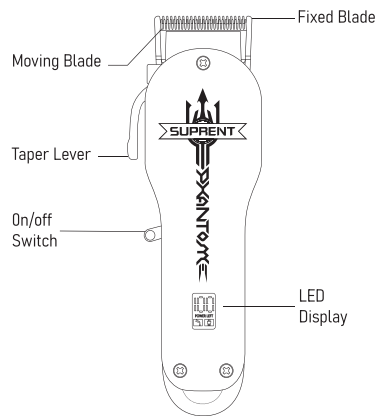

Cape



 USB Cable*1



Guide Combs



Clean Brush



Oil

BASIC PARAMETERS

- Ⓐ Speed: Hair Clipper 7000RPM;
- Ⓛ Type: Lithium Battery
Battery Capacity: Hair Clipper: 2000mAh;
- Ⓜ Power Supply Input: DC 5V 1A
- Ⓒ Charging Time: Hair Clipper: 180min;
Running Time: Hair Clipper 210min;
- Ⓢ Decibel: ≤ 65dB
- Ⓐ Charging Interface: USB-C Cable

PRECAUTIONS

**Please read this instruction manual carefully
before use and retain it for future reference.**

- ① When charging, please turn the switch to the "0" position first, connect the plug to the device, and then connect it to the socket.
- ② Never leave a trimmer plugged in unattended.
- ③ In addition to charging, please unplug the trimmer immediately after use.
- ④ Do not pull, twist or wrap the power cord on the device.
- ⑤ Keep the device power cord and trimmer away from heated surfaces.
- ⑥ Do not place or store the trimmer where it may fall or be pulled into a bathtub or sink. Do not put or drop into water or other liquids.
- ⑦ Do not use electrical appliances while bathing or showering.

- ⑧ Do not use the trimmer or power cord when it is damaged or cannot work properly after falling into water.
- ⑨ Never place or insert any object into any opening of the device.
- ⑩ Use the trimmer only for its intended use as described in this manual. Do not use accessories other than those specified by the manufacturer. Do not use extension cords to operate the device.
- ⑪ Do not use this device outdoors, or operate in places where aerosol (spray) products are used or oxygen is used.
- ⑫ Do not use this product when the blade has missing teeth or is damaged, otherwise you may be cut. Make sure the blade is properly aligned and oiled before each use.
- ⑬ Close supervision is required when this equipment is used on or near children, persons with limited physical, sensory or mental abilities, or persons with disabilities.
- ⑭ Keep lubricants away from children and pets.

Use instructions

Please use a 5V 1A charger to charge the hair clipper (accessories do not include a charger);

When working, the display is always on; the real-time battery percentage is displayed, and the charging logo starts to flash when the battery is less than 10%; when charging, the red light of the charging logo is always on, showing the real-time battery percentage; when charging is completed, the red light is always on, and the battery is displayed. 100.

Guide comb installation

Firstly align and secure the top of the guide comb with the blade head, and then snap the bottom of the guide comb into the bottom of the blade head. When disassembling, firstly pull the bottom of the guide comb apart, and then remove the guide comb.

Cleaning

To maintain optimum performance, please clean the clippers after each use.

1. Use the cleaning brush provided to clean any residual hair from the blades;
2. Remove the guide comb, and clean them under running water. Please ensure they are thoroughly
3. Oil the blades after each use to ensure optimum cutting performance.

IMPORTANT: The blades must be cleaned and oiled regularly to function properly, failure to clean and oil the blades regularly will void the warranty. The clippers are not whole body waterproof, do not rinse the blades under running water.

Oil

For better cutting performance, it is highly recommended to keep the blade oiled after each use.

1. Unscrew the cap of the oil bottle and cut off the end of the plastic tube with scissors.
2. Remove the blade cover and turn on the clipper.
3. Hold the clipper at a 45-degree angle, squeeze the tubing lightly, and drip some amount of the oil directly onto the blades.

4. Leave the clipper on for a few more seconds to allow the oil to spread thoroughly along the length of the blade.

5. Turn off the hair clipper and gently wipe with a cloth to remove excess oil before use.

Important: It is recommended to replace the blade head once a year for better cutting performance.

After a 40-minute continuous use, it generally heats up slightly. Please turn off the clipper and restart it after it cools down. If the heat is abnormally high, please stop using it immediately and cool it down for a while before restarting. If the heat persists, please contact customer service via support@suprent.com.

Hair clipper blade attachment and removal


If there is excessive noise, or you need to replace the blades, please follow the below steps:

Step 1. Turn off the hair clipper and adjust the taper (see picture A).

Step 2. Disassemble the screws and the fixed blade. Keep the screws.

Step 3. Disassemble the small moving blade on the plastic shaker and replace it with a new one (see picture B).

Step 4. Assemble and secure the fixed blade with the screw lightly. Make sure that the end of the moving blade teeth is about 1/32" (1mm) to 1/16" (1.5mm) lower than the end of the fixed blade as shown in picture C and that the moving blade is centered and parallel to the fixed blade.

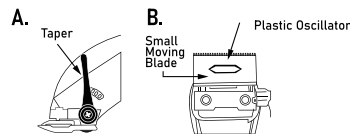

Warm Tips: The top edge of the fixed blade must be at least 1/32" (1 mm) higher than the top edge of the moving blade and as centered as possible. This is important to prevent the clippers from cutting too close or pinching the skin. Be sure to add a few drops of oil to the blades before running. Don't forget to tighten the screws after aligning the blades.


By following the above steps, you can ensure that your clippers will cut hair smoothly and safely. If you still have troubles, please contact SUPRENT SUPPORT Team for a detailed instruction video via support@suprent.com

Hair clipper adjustment taper

The tapered rod on the hair clipper can control the length of the hairstyle. It can be adjusted from 0.5mm-2mm.

How to adjust taper :

1. Slowly push the taper rod down to get a longer hair length.
2. Push the taper rod up to get a shorter hair length.

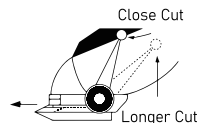

Eco-friendly package:

SUPRENT advocate being responsible for the earth and society and hope that available resources can be recycled to give value again by professional treatment, thus preventing the earth from waste heaping and environmental pollution. Therefore SUPRENT uses secondary recycled paper and soy-based inks on all of our packages and blisters to make a contribution to environmental protection and sustainable development.

Common problem

1. Unable to charge, and the red and blue lights flash alternately.
Please check the voltage of the power adapter and use the 5V 1A power adapter with the power cord provided with the product for charging;

2. It does not work when powered on, and the red and blue lights flash alternately

Reason: It may be that excessive hair on the cutter head triggers the stall protection function, causing the cutter head to be unable to operate;

Solution: Remove the cutter head according to the cutter head assembly and disassembly tutorial, clean the hair, and apply lubricant to restart the machine; if the problem cannot be solved after the operation, please contact SUPRENTPRO customer service.

2. Cutter head noise

Improper installation of the cutter head

-----Reinstall the cutter head according to the tutorial;

If it has not been cared for for a long time

----- Carry out oil drip care on the blade head;

There is hair in the gap of the cutter head

-----disassemble the cutter head to clean the hair;

If none of the above operations can solve the problem, please contact SUPRENT customer service

WARRANTY AND SERVICE

Warranty Description

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

If you are satisfied with our product and service, please feel free to share your user experience. If you have any further queries about our product, you are welcome to contact us without any hesitation. We will always be here assisting you.

SUPRENT After-sales Service:	support@suprent.com
Website:	www.suprent.com
Social Media	Facebook:@suprentinfo
Instagram:	@suprent_official
Youtube:	@suprent