

SUPRENT **PRO**

BEYOND MASTER

Everything in the process makes
who you are.

So we're here to witness the birth
of the masterpiece.

SUPRENT PRO, the Best Partner
of Masters.

THE BLACK OBSIDIAN - T

FINISH TRIMMER FT775

⌵
If you need a more detailed
multilingual manual version
(US/CA/EU/UK/JP), please scan the
following official QR code.



⌵
SCAN & GET EXTRA WARRANTY




SUPRENT AFTER-SALES SERVICE


✉ SUPPORT@SUPRENT.COM

🌐 WWW.SUPRENT.COM

PACKAGE INCLUDED

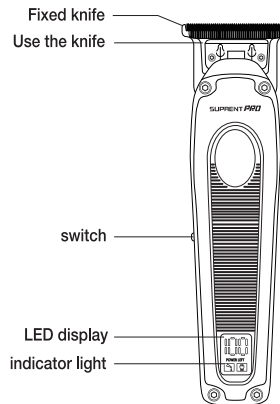

ACCESSORIES:

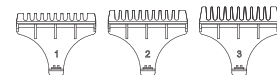

Limit comb*3, size: 1.5, 3, 6mm;



USB cable



Charging base



screwdriver



brush



Oil bottle

BASIC PARAMETERS

Speed: 7000RPM;
Type: Lithium Battery
Power Supply Input: DC 5V 1A
Battery Capacity: 2000mAh
Charging Time: 180 min
Running Time: 180 min
Decibel: ≤60dB
Charging Interface: USB Cable

PRECAUTIONS

1. Please fully charge the trimmer before first use or after long-term use (please use a power adapter with an input voltage no higher than 5V 1A when charging);
2. Before charging, please ensure that the electric clipper switch is in the OFF position;
3. Never drop or insert any object into the charging port of the machine;
4. Do not operate this equipment if the power cord is damaged or damaged. If it is not working properly or it has been dropped or damaged or dropped into water. Please contact Suprent official customers;
5. Keep the power cord away from heating locations;
6. Using USB cables not sold by Suprent may cause risks of fire, electric shock or personal injury;
7. Do not use it outdoors or operate in places where there are aerosol (spray) products or where oxygen is being used;
8. Do not use this product if the blade is damaged or broken, as it may harm the skin;
9. Improper reassembly may result in risk of electric shock or fire. If repair is required, please contact Suprent official customer;
10. The battery in this product is designed to provide maximum trouble-free life.

However, like all batteries, it will eventually wear out. Do not attempt to replace the battery. When repair or replacement is needed, please contact Suprent official customers;

11.Discarded batteries may be harmful to the environment. Many communities offer recycling or battery service collections. Please contact your local government for disposal information;

12.This equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision regarding use or instructed to operate the equipment by a person responsible for its safety.

PRODUCT DESCRIPTION CHARGING

1.When working, the display is always on and the real-time battery level is displayed on the screen; when 10% of the battery is left, the red charging logo flashes; after 2 hours of cumulative use, the refueling prompt on the screen flashes for 30 seconds;

2.When charging, the red charging light is always on; the screen displays the real-time battery percentage;

3.Fully charged, the screen displays 100%;

GUIDE COMB INSTALLATION

Firstly align and secure the top of the guide comb with the blade head, and then snap the bottom of the guide comb into the bottom of the blade head. When disassembling, firstly pull the bottom of the guide comb apart, and then remove the guide comb.

BLADE INSTALLATION AND REMOVAL

1.Make sure the trimmer is not connected to a power source and is turned off. Turn the trimmer upside down so that the trimmer teeth point downward. Place the trimmer on a flat surface and use a screwdriver to loosen the retaining screw on the blade. Remove the blade from the trimmer;

2.To install or replace the pruning blade, please follow the reverse steps and align the blade pad shaft with the moving blade pad. Once the blade is secured in place, replace the blade screw and loosen. Turn the trimmer over and align the screw hole of the fixed blade parallel to the upper screw hole of the trimmer; If you are still having issues, please contact the SUPRENT support team at support@suprent.com for a detailed instruction video.

BLADE ADJUSTMENT ZERO GAP


1.Use a screwdriver to unscrew the two small screws on the fixed blade;

2.Use your fingers to adjust the distance between the movable knife and the fixed knife until the movable knife blade is flush with the fixed knife blade or slightly lower than the fixed knife blade;

3.Make sure the blade is properly aligned. The teeth of the movable knife should be slightly lower than the upper edge of the fixed knife blade - about 1 mm apart (if the blade is not aligned correctly, you may cut or scratch your skin while trimming);

4.Ensure that the movable knife blade does not exceed the fixed knife blade (if the movable knife extends beyond the fixed knife, the skin may be cut);

5.After adjusting the blade to zero gap and your preferred position, gently tighten the two screws of the fixed blade. If the blade is not adjusted to a satisfactory level after testing, please repeat the adjustment process.

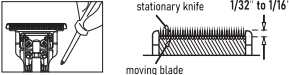

CLEANING

To maintain optimal performance, equipment should be cleaned after each use.

1.Use the provided cleaning brush to clean the remaining hair on the blade;

2.Remove the limiting combs, which can be rinsed under running water to ensure they are completely dry before storage or further use;

3.Oil the blade after each use to ensure optimal cutting performance;

IMPORTANT: The blade must be cleaned and oiled regularly to function properly, failure to clean and oil the blade regularly will void the warranty, do not rinse the blade.


MAINTENANCE

For optimal cutting performance, it is highly recommended to oil the blade after each use.

1.When using oil for the first time, unscrew the cap and cut off the end of the plastic tube with scissors;

2.Remove the blade guard and open the device;

3.Hold the scissors at a 45-degree angle, gently squeeze the oil tube, and then drip lubricant on the blade as shown by the arrow in the figure;

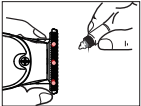

4) Leave the device on for a few more seconds to allow the oil to spread thoroughly along the length of the blade;

5) Before using on your hair, please turn off the hair clipper and gently wipe it with a dry cloth to remove excess oil.

FAQ

Q1: The blade is hot

A1: Due to the high-speed nature of the Suprent clipper, please check the blade heat frequently, especially on thin blades. If the blade is too hot, please stop using it for 5 minutes and then apply its own white oil. If you have a removable blade unit, you can replace the blades to maintain a comfortable temperature;

Q2: The display flashes "POWER LEFT%" characters;

A1: To trigger the charging overvoltage protection, please check whether the adapter input voltage is not higher than 5V 1A;

A2: Too much hair on the cutter head triggers the cutter head stall protection. Please remove the cutter head to clean the hair;

ECO-FRIENDLY PACKAGE:

SUPRENT advocate being responsible for the earth and society and hope that available resources can be recycled to give value again by professional treatment, thus preventing the earth from waste heaping and environmental pollution. Therefore SUPRENT uses secondary recycled paper and soy-based inks on all of our packages and blisters to make a contribution to environmental protection and sustainable development.

WARRANTY AND SERVICE

WARRANTY DESCRIPTION

Warranty Description

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

If you are satisfied with our product and service, please feel free to share your user experience. If you have any further queries about our product, you are welcome to contact us without any hesitation. We will always be here assisting you.

SUPRENT AFTER-SALES SERVICE:	SUPPORT@SUPRENT.COM
WEBSITE:	WWW.SUPRENT.COM
SOCIAL MEDIA FACEBOOK:	@SUPRENTINFO
INSTAGRAM:	@SUPRENT_OFFICIAL
YOUTUBE:	@SUPRENT