

SUPRENT

REFINE GROOMING REDEFINE YOURSELF

It's up to you to define the right way to groom.

The Black Shield
PROFESSIONAL HAIR CLIPPER HC236

IF YOU NEED A MORE DETAILED
MULTILINGUAL MANUAL VERSION
(US/CA/EU/UK/JP), PLEASE SCAN THE
FOLLOWING OFFICIAL QR CODE

 


SCAN & GET EXTRA WARRANTY



SUPRENT After-sales Service:
support@suprent.com

SPECIFICATIONS

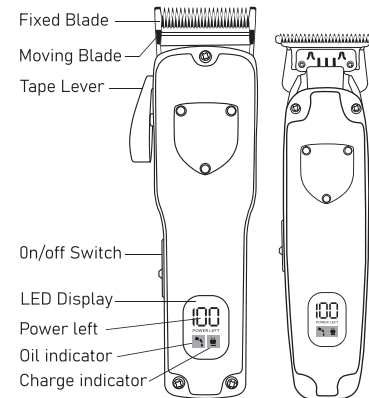

Guide Combs*9



USB-C
Cable



Cape



Cleaning
Brush



Oil

BASIC PARAMETERS

- Type: Lithium Battery
- Power Supply Input: DC 5V 1A
- Decibel: ≤65dB
- Charging Interface: USB-C Cable

Speed: 6500±200RPM

Battery Capacity: 2500mAh; Detail Trimmer 2000mAh

Charging Time: 180 min; Detail Trimmer 180 min

Running Time: 300min; Detail Trimmer 180 min

PRECAUTIONS

Please read this instruction manual carefully before use and keep it for future reference.

- When charging, please turn the switch to the "0" position first, connect the plug to the device, and then connect it to the socket.
- Never leave the trimmer unattended when plugged in.
- Always unplug the trimmer immediately after use, except when charging.
- Do not pull, twist, or tangle the power cord on the device.
- Keep the power cord and trimmer away from hot surfaces.

- Do not place or store the trimmer where it can fall or be pulled into a bathtub or sink. Do not drop into or immerse in water or other liquids.
- Do not use the trimmer while bathing or showering.
- Do not use the trimmer if it is damaged, or if it has fallen into water and does not work properly.
- Never insert any object into any opening of the appliance.
- Use the trimmer only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate the trimmer.
- Do not use this appliance outdoors, or in areas where aerosol (spray) products are being used or where oxygen is administered.
- Do not use this product if the blades are chipped or damaged, as this may cause cuts. Before each use, make sure that the blades are properly aligned and oiled.
- Close supervision is necessary when the appliance is used on or near children, or by persons with reduced physical, sensory or mental capabilities, or disabilities.
- Keep the lubricant out of reach of children and pets.

USE INSTRUCTIONS

When working:

The display screen will light up and show the real-time battery percentage. When the battery is lower than 10%, the red charging indicator will flash.

When charging:


The red charging indicator will be solid on and show the real-time battery percentage. When the battery is fully charged, the red charging indicator will be solid on and the battery percentage will show 100%.

ATTENTION:

1. Please fully charge the scissors before using it for the first time or not using it for a long time.
2. When charging, please use a power adapter with an input voltage no higher than 5V 1A.
3. Do not plug in the power when your hands are wet, otherwise there may be electric leakage.
4. Please do not pull the power cord forcefully to avoid damaging the power cord, otherwise it may cause leakage, short circuit or fire.
5. If damaged, stop using it immediately and replace it in time.
6. Please use the original power cord when charging. It cannot be used to charge other models to avoid accidents.

GUIDE COMB INSTALLATION

Firstly align and secure the top of the guide comb with the blade head, and then snap the bottom of the guide comb into the bottom of the blade head. When disassembling, firstly pull the bottom of the guide comb apart, and then remove the guide comb.

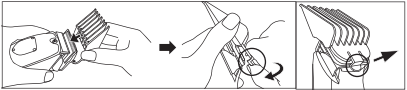

CLEANING

To maintain optimum performance, please clean the clippers after each use.

- 1、 Use the cleaning brush provided to clean any residual hair from the blades;
- 2、 Remove the guide comb, and clean them under running water. Please ensure they are thoroughly dry before storage or further use.
- 3、 Oil the blades after each use to ensure optimum cutting performance.

IMPORTANT: The blades must be cleaned and oiled regularly to function properly, failure to clean and oil the blades regularly will void the warranty. The clippers are not whole body waterproof, do not rinse the blades under running water.

OIL

For better cutting performance, it is highly recommended to keep the blade oiled after each use.

1. Unscrew the cap of the oil bottle and cut off the end of the plastic tube with scissors.
2. Remove the blade cover and turn on the clipper.
3. Hold the clipper at a 45-degree angle, squeeze the tubing lightly, and drip some amount of the oil directly onto the blades.
4. Leave the clipper on for a few more seconds to allow the oil to spread thoroughly along the length of the blade.
5. Turn off the hair clipper and gently wipe with a cloth to remove excess oil before use.

Important: It is recommended to replace the blade head once a year for better cutting performance.

After a 40-minute continuous use, it generally heats up slightly. Please turn off the clipper and restart it after it cools down. If the heat is abnormally high, please stop using it immediately and cool it down for a while before restarting. If the heat persists, please contact customer service via support@suprent.com.

HAIR CLIPPER BLADE ATTACHMENT AND REMOVAL

If there is excessive noise, or you need to replace the blades, please follow the below steps:


If there is excessive noise, or you need to replace the blades, please follow the below steps:

Step 1. Turn off the hair clipper and adjust the taper (see picture A).

Step 2. Disassemble the screws and the fixed blade. Keep the screws.

Step 3. Disassemble the small moving blade on the plastic shaker and replace it with a new one (see picture B).

Step 4. Assemble and secure the fixed blade with the screw lightly. Make sure that the end of the moving blade teeth is about to 1/32" (1mm) to 1/16" (1.5mm) lower than the end of the fixed blade and that the moving vlade is centered and parallel to the fixed blade. Warm Tips: The top edge of the fixed blade must be at least 1/32" (1 mm) higher than the top edge of the moving blade and as centered as possible. This is important to prevent the clippers from cutting too close or pinching the skin. Be sure to add a few drops of oil to the blades before running. Don't forget to tighten the screws after aligning the blades.

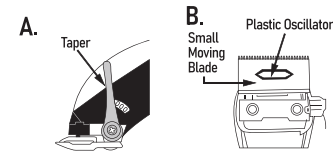


By following the above steps, you can ensure that your clippers will cut hair smoothly and safely. If you still have troubles, please contact SUPRENT SUPPORT Team for a detailed instruction video via support@suprent.com

HOW TO ADJUST THE TAPER?

he tapered rod on the hair clipper can control the length of the hairstyle. It can be adjusted from 0.5mm -1.2mm-1.8mm-2.5mm-3mm.

1. Slowly push the taper rod down to get a longer hair length.
2. Push the taper rod up to get a shorter hair length.

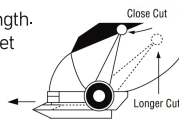

ECO-FRIENDLY PACKAGE:

SUPRENT advocate being responsible for the earth and society and hope that available resources can be recycled to give value again by professional treatment, thus preventing the earth from waste heaping and environmental pollution. Therefore SUPRENT uses secondary recycled paper and soy-based inks on all of our packages and blisters to make a contribution to environmental protection and sustainable development.

WARRANTY AND SERVICE

Warranty Description

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

If you have troubles, please contact SUPRENT Support Team support@suprent.com.