

SUPRENT **PRO**

BEYOND MASTER

Everything in the process makes
who you are.
So we're here to witness the birth
of the masterpiece.
SUPRENT PRO, the Best Partner
of Masters.

THE BLACK OBSIDIAN - C

HAIR CLIPPER HC775

≡
If you need a more detailed
multilingual manual version
(US/CA/EU/UK/JP), please scan the
following official QR code.



≡
SCAN & GET EXTRA WARRANTY




SUPRENT AFTER-SALES SERVICE

✉ SUPPORT@SUPRENT.COM


🌐 WWW.SUPRENT.COM

PACKAGE INCLUDED

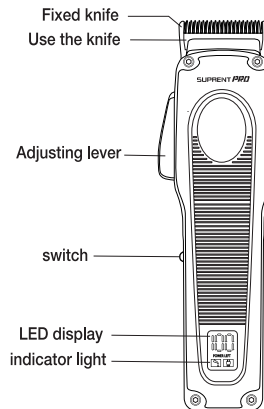

ACCESSORIES:

Silver metal limit comb*8

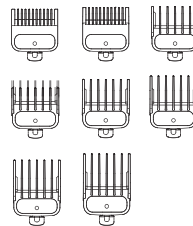

Charging base



USB cable



screwdriver



brush



Oil
bottle

BASIC PARAMETERS

Speed: 7000RPM

Type: Lithium Battery

Power Supply Input: DC 5V 1A

Battery Capacity: 2500mAh

Charging Time: 180 min

Running Time: 180 min

Decibel: ≤60dB

Charging Interface: USB Cable

PRECAUTIONS

1. Please fully charge the trimmer before first use or after long-term use (please use a power adapter with an input voltage no higher than 5V 1A when charging);
2. Before charging, please ensure that the electric clipper switch is in the OFF position;
3. Never drop or insert any object into the charging port of the machine;
4. Do not operate this equipment if the power cord is damaged or damaged. If it is not working properly or it has been dropped or damaged or dropped into water. Please contact Suprent official customers;
5. Keep the power cord away from heating locations;
6. Using USB cables not sold by Suprent may cause risks of fire, electric shock or personal injury;
7. Do not use it outdoors or operate in places where there are aerosol (spray) products or where oxygen is being used;

8.Do not use this product if the blade is damaged or broken, as it may harm the skin;
9.Improper reassembly may result in risk of electric shock or fire. If repair is required, please contact Suprent official customer;
10.The battery in this product is designed to provide maximum trouble-free life. However, like all batteries, it will eventually wear out. Do not attempt to replace the battery. When repair or replacement is needed, please contact Suprent official customers;
11.Discarded batteries may be harmful to the environment. Many communities offer recycling or battery service collections. Please contact your local government for disposal information;
12.This equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision regarding use or instructed to operate the equipment by a person responsible for its safety.

CHARGING

When working, the display is always on and the real-time battery level is displayed on the screen; when 10% of the battery is left, the red charging logo flashes; after 2 hours of cumulative use, the refueling prompt on the screen flashes for 30 seconds;
When charging, the red charging light is always on; the screen displays the real-time battery percentage;
Fully charged, screen shows 100%;

GUIDE COMB
INSTALLATION

Firstly align and secure the top of the guide comb with the blade head, and then snap the bottom of the guide comb into the bottom of the blade head. When disassembling, firstly pull the bottom of the guide comb apart, and then remove the guide comb.

BLADE REPLACEMENT

With the bottom of the cutterhead protruding against the groove in the body, align your finger with the position between the teeth of the cutterhead and press down firmly until it snaps into place.



If you are still having issues, please contact the SUPRENT support team at support@suprent.com for a detailed instruction video.

ADJUST TAPER

The tapered rod on the hair clipper can control the length of the hairstyle. It can be adjusted from 0.5mm-2mm.

- How to adjust taper:**
- 1. Slowly push the taper rod down to get a longer hair length.
 - 2. Push the taper rod up to get a shorter hair length.

CLEANING

To maintain optimal performance, equipment should be cleaned after each use.

- 1.Use the provided cleaning brush to clean the remaining hair on the blade;
- 2.Remove the limiting combs, which can be rinsed under running water to ensure they are completely dry before storage or further use;
- 3.Oil the blade after each use to ensure optimal cutting performance;

MPORTANT: The blade must be cleaned and oiled regularly to function properly, failure to clean and oil the blade regularly will void the warranty, do not rinse the blade.

MAINTENANCE

For optimal cutting performance, it is highly recommended to oil the blade after each use.

- 1.When using oil for the first time, unscrew the cap and cut off the end of the plastic tube with scissors;
- 2.Remove the blade guard and open the device;

- 3.Hold the scissors at a 45-degree angle, gently squeeze the oil tube, and then drip lubricant on the blade as shown by the arrow in the figure;



- 4.Leave the device on for a few more seconds to allow the oil to spread thoroughly along the length of the blade;
- 5.Before using on your hair, please turn off the hair clipper and gently wipe it with a dry cloth to remove excess oil.

FAQ

- Q1: The blade is hot
A1: Due to the high-speed nature of the Suprent clipper, please check the blade heat frequently, especially on thin blades. If the blade is too hot, please stop using it for 5 minutes and then apply its own white oil. If you have a removable blade unit, you can replace the blades to maintain a comfortable temperature;
- Q2: The display flashes "POWER LEFT%" characters;
A1: To trigger the charging overvoltage protection, please check whether the adapter input voltage is not higher than 5V 1A;
A2: Too much hair on the cutter head triggers the cutter head stall protection. Please remove the cutter head to clean the hair;

ECO-FRIENDLY PACKAGE:

SUPRENT advocate being responsible for the earth and society and hope that available resources can be recycled to give value again by professional treatment, thus preventing the earth from waste heaping and environmental pollution. Therefore SUPRENT uses secondary recycled paper and soy-based inks on all of our packages and blisters to make a contribution to environmental protection and sustainable development.

WARRANTY
AND SERVICE

WARRANTY DESCRIPTION

Warranty Description
From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

If you are satisfied with our product and service, please feel free to share your user experience. If you have any further queries about our product, you are welcome to contact us without any hesitation. We will always be here assisting you.

SUPRENT AFTER-SALES SERVICE:	SUPPORT@SUPRENT.COM
WEBSITE:	WWW.SUPRENT.COM
SOCIAL MEDIA FACEBOOK:	@SUPRENTINFO
INSTAGRAM:	@SUPRENT_OFFICIAL
YOUTUBE:	@SUPRENT