

SUPRENT **PRO**

BEYOND MASTER

Everything in the process makes who you are.
So we're here to witness the birth of the masterpiece.
SUPRENT PRO, the Best Partner of Masters.

THE BLACK OBSIDIAN

PROFESSIONAL HAIR CLIPPER HC776

IF YOU NEED A MORE DETAILED
MULTILINGUAL MANUAL VERSION
(US/CA/EU/UK/JP), PLEASE SCAN THE
FOLLOWING OFFICIAL QR CODE.



SCAN & GET EXTRA WARRANTY

 


✉ support@suprent.com


🌐 www.suprent.com

Beyond Master


PACKAGE INCLUDED:

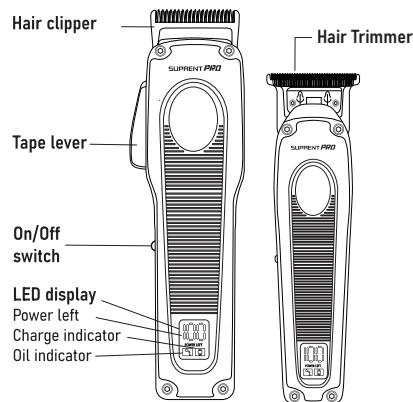

Accessories:

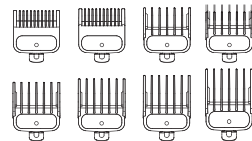 

8 Guide combs for hair clipper

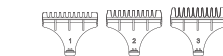 

3 Guide combs for detail trimmer



Rechargeable base * 2



Screwdrivers Brush Oil bottle

PARAMETER

- Ⓐ Battery type: lithium battery
- Ⓐ Power input: DC 5V 1A
- Ⓐ Decibel: <60 dB
- Ⓑ Charging port: USB cable

Hair Clipper:

Speed: 7000*200RPM
Battery capacity: 2500mAh
Charging time: 180 mins
Running time: 180 mins

Hair Trimmer:

Speed: 7000*200RPM
Battery capacity: 2000mAh
Charging time: 180 mins
Running time: 180 mins

Preface:

Before you use the new SUPRENT clippers, please follow the below instruction. With proper maintenance of the clipper, it will give you years of service.



CHARGING INSTRUCTIONS

Fully charge the clippers before your first use or long-term nonuse.

Please make sure to use an adapter with input voltage not higher than 5V/1A.

1. Take out the electric clipper and USB charging cable from the colour box and plug in the 5V1A AC adapter.

2. Plug the B-end of the USB charging cable directly into the socket on the bottom of the clipper (Figure A).
 3. Plug the adapter into a socket with 100-240V, 50/60 cycle AC power.
- NOTE: Please make sure the clipper is off when charging (Figure B). When it is charging, the display will show the charging icon.

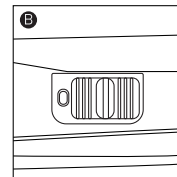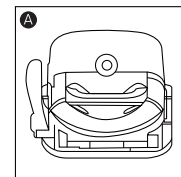

Troubleshooting Charging Issues

If the clippers are not charging, here are a few things you can check:

1. Make sure that there is voltage at the wall outlet. You can confirm this by plugging in another device and seeing if it works.
2. Check to make sure that the adapter cord is securely plugged into both the clippers and the wall outlet.
3. If you have tried all of these steps and the clippers are still not charging, please contact Suprent Customer Service for assistance via support@suprent.com.

Corded Operation

If the clipper is powered off during a haircut, you can connect the charging cable and continue to use it corded. When the charging cable is connected while the clipper is running, the red charging light on the display will remain on. The clipper will not charge while it is running, so please place them in a safe place to charge after use.

Switch On & Off

To start the hair clipper, move the power switch to the ON position. To stop the hair clipper, move the power switch back to the original position. (Figure B)

Lithium-Ion Battery Usage Guide

1. Lithium-ion batteries do not have a "memory effect" like nickel metal hydride (NiMH) or nickel-cadmium (NiCd) batteries. Hence you can charge the hair clipper at any time, even if it is not completely drained.
2. Lithium-ion batteries perform best when they are used regularly. If you are not going to use the clipper for several months, you can discharge the battery to 0% before storing it.
3. Do not place the clipper near vents, radiators, or in direct sunlight. Heat causes damage to the battery.
4. It is normal that the battery life of a lithium-ion battery gradually decreases over time.

5. If the battery does not seem to be holding a charge as well as it used to, you may need to replace it.

Battery Disposal

The batteries in the clipper are recyclable. Please dispose of them properly according to your local laws and regulations. Here are some tips for disposing of batteries properly:

1. Look for a battery recycling bin in your community. Many stores and recycling centers have battery recycling bins.
2. Do not throw batteries in the trash. Batteries can contain hazardous materials that can pollute the environment if they are not disposed of properly.

GUIDE COMB INSTALLATION AND REMOVAL

To install the guide comb, align the top of the guide comb with the blade head. Then, press down on the top of the guide comb until it snaps into place.


To remove the guide comb, press down on the bottom of the guide comb until it pops out. Then, pull the guide comb away from the blade head.

HOW TO REMOVE THE BLADE HEAD:

Press the blade head on the back of the clipper and gently push it upward.

HOW TO INSTALL THE BLADE HEAD:

With the bottom of the cutterhead protruding against the groove in the body, align your finger with the position between the teeth of the cutterhead and press down firmly until it snaps into place.

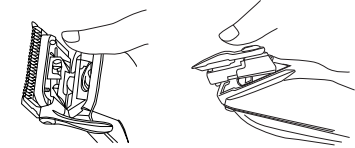

CLEANING YOUR HAIR CLIPPER



To maintain optimum performance, it is important to clean your hair clipper after each use.

- Here are the steps involved:
- 1.Use the cleaning brush provided to remove any residual hair from the blades.
 - 2.Remove the guide comb and clean it under running water.
 - 3.Clean the cutter head with the brush.To remove the cutter head.
 - 4.Wipe down the exterior of the clippers with a damp cloth.
 - 5.Air dry the clipper completely before storing them.
- Important:
The clipper is not wholebody waterproof. Do not rinse the clipper under running water.

Oiling

To keep your hair clippers in good working condition and ensure optimal cutting performance, it is important to oil the blades after each use. Here are some tips:

- 1.Blades should be oiled before, during, and after each use. If there are streaks or noise between the moving and fixed blades,please drip some oil onto the blades.
- 2.To prevent oil from entering the motor, apply the oil drops in the arrangement.(Figure C)
- 3.Apply a few drops of the oil provided to the front and sides of the blade head (Figure D).
- 4.Wipe excess oil off the blade with a soft, dry cloth.

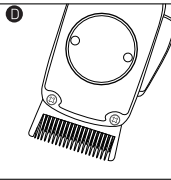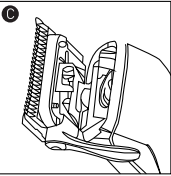

Maintenance And Repairing The Blades

If the blade still won't cut after cleaning, there may be some tiny hairs stuck between the blades. If this happens, you will need to remove cutter head off the body. To do this, follow these steps:

- 1. Press the blade head on the back of the of the

- clipper and gently push it upward.
- 2. Carefully slide the upper blade sideways without releasing the tension spring or moving the upper blade completely out of the tension spring.
- 3. Wipe the surface between the blades with a dry cloth.
- 4. Drop a drop of oil at the junction of the upper blade and lower blade and the guide groove of the tension spring.
- 5. Repeat step 4 by sliding the upper blade to the opposite side of the lower blade.
- 6. Once this process is complete, slide the upper blade so that it lines up with the lower blade.

Cooling Your Hair Clipper

Due to the high performance of suprent clippers, it is important to check the blade heat frequently. If the blade becomes too hot, stop using it for 5 minutes to allow it to cool down. Once the blade has cooled, apply a small amount of oil provided to the blade. This will help to lubricate the blade and prevent it from overheating. If you have a replacement blade, you can also replace the blades if you need to use urgently.

Important:

If the heat persists, please contact customer service via support@suprent.com.

ADJUST TAPER

The tapered rod on the hair clipper can control the length of the hairstyle. It can be adjusted from 0.5mm–2mm.

How to adjust taper:

- 1. Slowly push the taper rod down to get longer hair length.
- 2. Push the taper rod up to get shorter hair length.

ECO-FRIENDLY PACKAGE

SUPRENT advocate being responsible for the earth and society and hope that available resources can be recycled to give value again by professional treatment, thus preventing the earth from waste heaping and environmental pollution. Therefore SUPRENT uses secondary recycled paper and soy-based inks on all of our packages and blisters to make a contribution to environmental protection and sustainable development.

WARM TIPS

Read all instructions before using the clipper.

- 1. Do not use the clipper if it has been dropped into water.

- 2. Do not use the clipper in the bath or shower.
- 3. Do not place or store the clipper where it can be dropped or pulled into water or other liquids.
- 4. Be sure to unplug the clipper after use, except when charging.
- 5. Unplug the power plug before cleaning, disassembly, or assembly.
- 6. Do not leave the clipper unattended while it is plugged in.
- 7. This clipper is not intended for use by children.
- 8. Use the clipper only for its intended purpose. Do not use attachments that are not recommended by SUPRENT.
- 9. Never operate the clipper if the power cord is damaged or frayed. If the clipper is not working properly, or if it has been dropped or damaged, please contact Suprent customer service via support@suprent.com.
- 10. Keep the power cord away from heat-generating sources.
- 11. Do not drop or insert any objects into the charging port of the clipper.
- 12. Do not use the clipper outdoors or in areas where there are aerosol products or oxygen being used.
- 13. Do not use the clipper if the blade is damaged or broken.
- 14. To disconnect the clipper, slide the power switch to the OFF position and remove the plug from the outlet.
- 15. Do not use a USB cable that is not sold by SUPRENT. This could pose a fire hazard.

- 16. Do not disassemble the USB cable. This could also pose a fire hazard.
- 17. The batteries in this clipper are designed to provide maximum trouble-free life. However, like all batteries, they will eventually die.
- 18. Do not attempt to replace the batteries yourself. If the batteries need to be replaced, please contact Suprent customer service via support@suprent.com.
- 19. Discarded batteries should be disposed of properly. Many communities offer recycling or battery collection programs. Please contact your local authority for more information.
- 20. Warning: Do not touch the two terminals at the tail charging interface of the clipper with metal objects or body parts. This may cause a short circuit, which could result in fire or serious injury.
- 21. This product is for hair grooming only. The battery of this product can only be replaced by technicians designated by Suprent.
- 22. Warning: The cutting blade may become hot after prolonged use.
- 23. Please keep the clipper in a dry environment. Do not use or store the clipper in a humid or wet environment.
- 24. Warning: During use, do not place the clipper where the following conditions may occur:
 - *Damaged by animals
 - *Open air condition

WARRANTY AND SERVICE

Warranty Description

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

If you are satisfied with our product and service, please feel free to share your user experience. If you have any further queries about our product, you are welcome to contact us without any hesitation. We will always be here assisting you.

SUPRENT After-sales Service:	support@suprent.com
Website:	www.suprent.com
Social Media	Facebook:@suprentinfo
Instagram:	@suprent_official
Youtube:	@suprent