



IF YOU NEED A MORE DETAILED
MULTILINGUAL MANUAL VERSION
(US/CA/EU/UK/JP), PLEASE SCAN THE
FOLLOWING OFFICIAL QR CODE.



 
 
SCAN & GET EXTRA WARRANTY



SUPRENT After-sales Service:
support@suprent.com

WAVE GLIDER
Grooming Kit BT576

SPECIFICATIONS

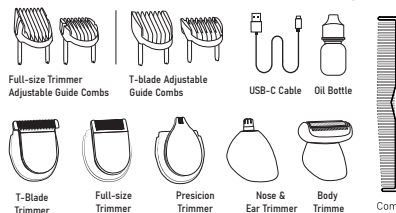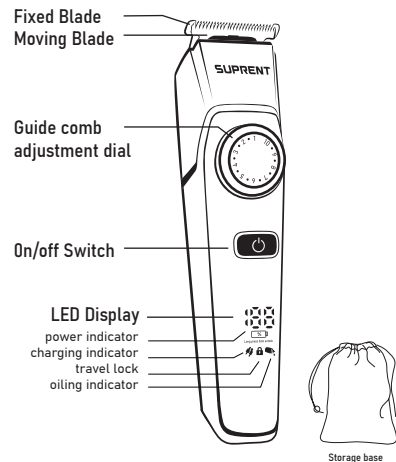

Basic Parameters

Speed: 6500±200RPM
ChargingTime:150 min
Running Time:210 min

- Type: Lithium Battery
- Power Supply Input: DC 5V 1A
- Decibel: ≤65dB
- Charging Interface: Type-C

Precautions

Please read this instruction manual carefully before use and keep it for future reference..

1. Turn off the trimmer first before charging, and then connect the cable to its port and then the wall socket.
2. Never leave the trimmer unattended when plugged in.
3. Always unplug the trimmer immediately after use, except when charging.
4. Do not pull, twist, or tangle the power cord on the device.
5. Keep the power cord and trimmer away from hot surfaces.
6. Do not place or store the trimmer where it can fall or be pulled into a bathtub or sink. Do not drop into or immerse in water or other liquids.

7. The trimmer can be used while it's plugged in, but never plug it in when in the bath, shower, or any really damp place.
8. Do not use the trimmer if it is damaged, or if it has fallen into water and does not work properly.
9. Never insert any object into any opening of the appliance.
10. Use the trimmer only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate the trimmer.
11. Do not use this appliance outdoors, or in areas where aerosol (spray) products are being used or where oxygen is administered.
12. Do not use this product if the blades are chipped or damaged, as this may cause cuts. Before each use, make sure that the blades are properly aligned and oiled.
13. Close supervision is necessary when the appliance is used on or near children, or by persons with reduced physical, sensory or mental capabilities, or disabilities.
14. Keep the beard trimmer and its accessories away from infants, children, and pets.

Travel lock function

Turn on the travel lock:

Press and hold the power button for 3 seconds after turning on the phone. When the  symbol appears on the screen, the travel lock function is turned on;

Turn off the travel lock:

Press and hold the power button for 3 seconds. A 3-second timer will appear on the screen. Once the countdown is completed, the phone can be turned on normally.

Use instructions

When working:

The display screen will light up and show the real-time battery percentage.

When the battery is lower than 10%, the red charging indicator will flash.

 
When charging:

The red charging indicator will be solid on and show the real-time battery percentage.


When the battery is fully charged, the red charging indicator will be solid on and the battery percentage will show 100.

Installation and use of guide comb

1. Make sure the trimmer is turned off;
2. To install the guide comb, first press it gently into the slot (Figure A) until it clicks into place.
3. Remove the guide comb, hold both sides of the trimming comb with one hand, and pull it up.

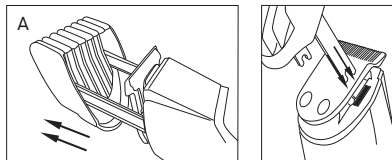

 4. To adjust the size of the guide comb, rotate the adjustment knob on the body, one gear per 0.5mm, the size increases in the counterclockwise direction, and decreases in the clockwise direction;




T-blade trimmer and Full-size Trimmer blade are each provided with two trimming combs, which are used to trim hair with a length range of 1-10 mm and 11-20 mm respectively. Please choose the appropriate trimming comb according to your needs; When trimming the beard with the guide comb, in order to avoid trimming too long by mistake, we recommend that you trim along the direction of the beard growth;

Removing and installing the cutter head

1. Make sure the trimmer is in the off state;




2. When removing the cutter head, place your fingers on the cutter teeth and push outwards with force (as shown in Figure B);
3. When installing the cutter head, align the bottom of the cutter head with the card position (as shown in Figure C), press upwards, and buckle the cutter head into the body,

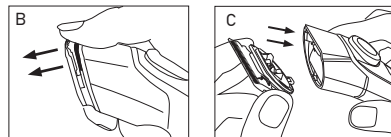

Instructions for use of the blade

1. T blade trimmer is used for sideburns, hair and thick and hard beards;
2. Full-size trimmer is used for carving the beard line around the lips (Figure D), fine and short hair and beard trimming;
3. Precision Trimmer is used to trim the exposed hair of the nostrils/fine carving trimming (Figure E);

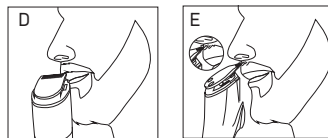

4. Nose & Ear Trimmer is used to trim nose hair and ear hair;
5. Body Trimmer is used to trim hair on various parts of the body trunk: chest hair/leg hair/armpit hair, etc.;

Oil

For better cutting performance, it is highly recommended to keep the blade oiled after each use.

1. Unscrew the cap of the oil bottle and cut off the end of the plastic tube with scissors.
 2. Remove the blade cover and turn on the clipper.
 3. Hold the clipper at a 45-degree angle, squeeze the tubing lightly, and drip some amount of the oil directly onto the blades
 4. Leave the clipper on for a few more seconds to allow the oil to spread thoroughly along the length of the blade.
 5. Turn off the hair clipper and gently wipe with a cloth to remove excess oil before use.
- Important: It is recommended to replace the blade head once a year for better cutting performance.

After a 40-minute continuous use, it generally heats up slightly. Please turn off the clipper and restart it after it cools down. If the heat is abnormally high, please stop using it immediately and cool it down for a while before restarting. If the heat persists, please contact customer service via support@suprent.com.

Eco-friendly package:

SUPRENT advocate being responsible for the earth and society and hope that available resources can be recycled to give value again by professional treatment, thus preventing the earth from waste heaping and environmental pollution. Therefore SUPRENT uses secondary recycled paper and soy-based inks on all of our packages and blisters to make a contribution to environmental protection and sustainable development.

WARRANTY AND SERVICE

Warranty Description

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

If you have troubles, please contact SUPRENT Support Team support@suprent.com.