

SUPRENT *PRO*

BEYOND MASTER

EVERYTHING IN THE PROCESS MAKES WHO YOU ARE.
SO WE'RE HERE TO WITNESS THE BIRTH OF THE MASTERPIECE.
SUPRENT PRO, THE BEST PARTNER OF MASTERS.

THE DARK REAPER
PROFESSIONAL FOIL SHAVER FS515

IF YOU NEED A MORE DETAILED
MULTILINGUAL MANUAL VERSION
(US/CA/EU/UK/JP), PLEASE SCAN THE
FOLLOWING OFFICIAL QR CODE

 
 
 
 


SCAN & GET EXTRA WARRANTY



SUPRENT After-sales Service:
support@suprent.com

SPECIFICATIONS

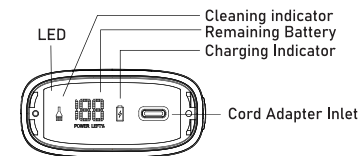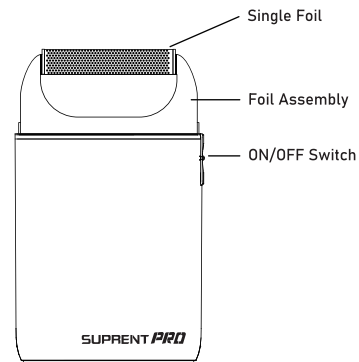

BASIC PARAMETERS

- Speed** : 7500RPM
- Decibel** : ≤ 70dB
- Waterproof Grade** : IPX5
- Charging Interface** : USB-C Cable
- Type** : Lithium Battery
Power Supply Input : DC 5V 1A
Battery Capacity : 600mAh
Charging Time : 2H
Running Time : 2H

SAFETY PRECAUTIONS

- The shaver is a precision grooming tool and should be kept out of the reach of children. Sharp blades and electronic components may pose a safety risk if not handled properly.
- Only use the provided charging adapter to charge the shaver. Avoid using incompatible chargers as this may damage the device or create a safety hazard.
- Do not charge the shaver near water or in a humid environment to prevent electric shock.

- 4 Avoid exposing the shaver to excessive water when charging or cleaning. This is especially important when using the shaver near a sink or in the shower.
- 5 Before each use, inspect the shaver for any obvious damage. If any cracks, exposed wires, or other signs of damage are found, do not use the device.
- 6 The FS265 is designed for facial trimming. Avoid using the shaver on other body parts or for unintended purposes to avoid injury.
- 7 Keep the power cord away from hot surfaces and make sure it is not twisted or tangled. This helps prevent damage to the cord and reduces the risk of electrical hazards.
- 8 Use only genuine replacement parts specified by the manufacturer, such as foils and cutters. Using unauthorized or third-party accessories may affect safety and performance.
- 9 If the shaver exhibits any abnormal behavior, such as unusual sounds, odors, or overheating, stop using it immediately and contact SUPRENT customer support for assistance.
- 10 When not in use, store the product in a dry and cool place. Avoid exposing the shaver to direct sunlight or extreme temperatures.
- 11 If you are traveling with the shaver, pack it properly to prevent damage. Make sure to turn off the device during travel to avoid accidental activation.

USE INSTRUCTIONS

When working: the display lights up and displays the real-time battery percentage; when the battery is less than 10%, the charging logo flashes red;

When charging: the charging logo lights up in red and displays the real-time battery percentage;

When fully charged: the red charging logo goes out and only the battery level shows 100%;

⚠ Notice

1. Please use a 5V 1A adapter for charging (the product is not equipped with an adapter);
2. Please confirm that the product is turned off before charging;
3. The adapter may get hot when charging, this is normal;
4. In order to maintain the optimal capacity of the rechargeable battery, the shaver should be charged for 2 hours every approximately 6 months.

INSTRUCTIONS FOR USE

1. Users with sensitive skin, easy inflammation after shaving, or skin allergies should test the shaver on their legs or arms before using it.
2. Remove the protective cover and turn on the device to start shaving. Using your fingers to pull the skin taut, hold the razor at right angles to the area to be shaved while moving the razor slowly and steadily against the direction of hair growth;
3. Please turn off the shaver and clean it after each shave.


⚠ NOTICE:

1. Do not push the razor hard against your skin as this may cause irritation, heat up the razor and prevent a perfect shave.
2. Please note that it takes 2 to 4 weeks for your skin to adapt to the shaver, so please do not change shaving tools during this period.
3. If the hair is longer than 1/32 inch, please use a trimmer to cut the hair short first, and then use a razor for a smooth and close shave.

CLEANING

Please make sure the shaver is turned off for cleaning and maintenance;

1. Lift up the knife screen assembly, and then remove the aluminum foil assembly (see Figure 1);
2. Use a brush to clean the hair debris on and around the aluminum foil component, blade (see Figure 2);
3. If necessary, you can remove the aluminum foil component and place it under water to rinse (note: the aluminum foil component needs to be removed before rinsing) (see Figure 4) ;
4. After ensuring that all parts are dry, snap in the blade and knife net assembly (see Figure 3).

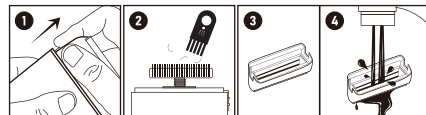


REPLACE ALUMINUM FOIL ASSEMBLY

1. Hold both sides of the foil head assembly and gently pull it upwards from the shaver assembly (see Figure 5).
2. Remove the replacement foil head assembly from the packaging. Align the replacement foil head assembly with the blade. Carefully move the replacement foil head assembly down towards the shaver unit until it clicks securely into place. Please be careful not to damage the foil or blade when installing.
3. After replacing the cutter head assembly, open the shaver and test whether it works normally;

REPLACE ALUMINUM FOIL ASSEMBLY

1. To remove the cutter, place your fingers on the sides and gently pull up and away from the drive shaft (see Figure 6) .
2. To replace the cutter, please take out the new cutter (FXRF2/FXRF2G/FXRF2RG) from the package. Align the cutter with the drive shaft and push down gently until it clicks into place.
3. After replacing the blade, open the shaver to test whether it works normally;

Please make sure the product is turned off before replacing it.

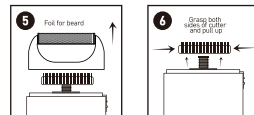

ECO-FRIENDLY PACKAGE:

SUPRENT advocate being responsible for the earth and society and hope that available resources can be recycled to give value again by professional treatment, thus preventing the earth from waste heaping and environmental pollution. Therefore SUPRENT uses secondary recycled paper and soy-based inks on all of our packages and blisters to make a contribution to environmental protection and sustainable development.

WARRANTY AND SERVICE

Warranty Description

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

If you have troubles, please contact SUPRENT Support Team support@suprent.com.