

SUPRENT

Refine Grooming Redefine Yourself

It's up to you to define the right way to groom.

**THE
BLACK Scorpion-T**
PROFESSIONAL FINISH TRIMMER FT225

IF YOU NEED A MORE DETAILED
MULTILINGUAL MANUAL VERSION
(US/CA/EU/UK/JP), PLEASE SCAN THE
FOLLOWING OFFICIAL QR CODE.




SCAN & GET EXTRA WARRANTY

 


SUPRENT After-sales Service:
support@suprent.com

PACKAGE INCLUDED:

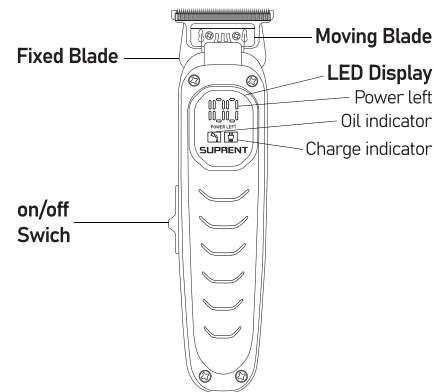

Accessories:



Guide Combs*3



USB cable

Oil

Brush

BASIC PARAMETERS

- ② Type: Lithium Battery
- ② Power Supply Input: DC 5V 1A
- ⑩ Decibel: ≤70dB
- ③ Charging Interface: USB Cable
- Hair Clipper
- Speed: 6000RPM
- Battery Capacity: 1200mAh
- ChargingTime: 120min
- Running Time: 210min

PRECAUTIONS

Please read this instruction manual carefully before use and keep it for future reference.

1. When charging, please turn the switch to the "0" position first, connect the plug to the device and then connect it to the socket.
2. Never leave the trimmer unattended when plugged in.
3. Always unplug the trimmer immediately after use except when charging.

4. Do not pull, twist, or tangle the power cord on the device.
5. Keep the power cord and trimmer away from hot surfaces.
6. Do not place or store the trimmer where it can fall or be pulled into a bathtub or sink. Do not drop into or immerse in water or other liquids.
7. Do not use the trimmer while bathing or showering.
8. Do not use the trimmer if it is damaged, or if it has fallen into water and does not work properly.
9. Never insert any object into any opening of the appliance.
10. Use the trimmer only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate the trimmer.
11. Do not use this appliance outdoors, or in areas where aerosol (spray) products are being used or where oxygen is administered.
13. Do not use this product if the blades are chipped or damaged, as this may cause cuts. Before each use, make sure that the blades are properly aligned and oiled.
14. Close supervision is necessary when the appliance is used on or near children, or by person with reduced physical, sensory or mental capabilities, or disabilities.

15. Keep the lubricant out of reach of children and pets.

USE INSTRUCTIONS

When working:

The display screen will light up and show the real-time battery percentage. When the battery is lower than 10%, the red charging indicator will flash.

When charging:

The red charging indicator will be solid on and show the real-time battery percentage. When the battery is fully charged, the red charging indicator will be solid on and the battery percentage will show 100%.

Guide comb installation:

Firstly align and secure the top of the guide

comb with the blade head, and then snap the bottom of the guide comb into the bottom of the blade head. When disassembling, firstly pull the bottom of the guide comb apart, and then remove the guide comb.

Cleaning:

To maintain optimum performance, please clean the clippers after each use.
1. Use the cleaning brush provided to clean any residual hair from the blades
2. Remove the guide comb, and clean them under running water. Please ensure they are thoroughly dry before storage or further use.
3. Oil the blades after each use to ensure optimum cutting performance.

IMPORTANT:

The blades must be cleaned and oiled regularly to function properly, failure to clean and oil the blades regularly will void the warranty.

The clippers are not whole body waterproof, do not rinse the blades.

Oil:

For better cutting performance, it is highly recommended to keep the blade oiled after each use.

1. Unscrew the cap of the oil bottle and cut off the end of the plastic tube with scissors.
2. Remove the blade cover and turn on the clipper.
3. Hold the clipper at a 45-degree angle, squeeze the tubing lightly, and drip some amount of the oil directly onto the blades.
4. Leave the clipper on for a few more seconds to allow the oil to spread thoroughly along the length of the blade.
5. Turn off the hair clipper and gently wipe with a cloth to remove excess oil before use.

Important:

It is recommended to replace the blade head

once a year for better cutting performance.

After a 40-minute continuous use, it generally heats up slightly. Please turn off the clipper and restart it after it cools down. If the heat is abnormally high, please stop using it immediately and cool it down for a while before restarting.

If the heat persists, please contact customer service via support@suprent.com.

ECO-FREENDLY PACKAGE

SUPRENT advocate being responsible for the earth and society and hope that available resources can be recycled to give value again by professional treatment, thus preventing the earth from waste heaping and environmental pollution.

Therefore SUPRENT uses secondary recycled paper and soy-based inks on all of our packages and blisters to make a contribution to environmental protection and sustainable development.

WARRANTY AND SERVICE

Warranty Description:

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

If you have troubles, please contact SUPRENT Support Team support@suprent.com.