

SUPRENT *men*

SUPRENT *men*

GROOMING KIT
GK215 "Gatling"

BRAND STORY

If you need a more detailed
multilingual manual version
(US/CA/EU/UK/JP), please scan
the following official QR code





Haircare, We Care

SUPRENT® has been specializing in haircare
appliances since 2015, loved by more than 5 million
users worldwide. We care haircare and what you
care. Your 101% satisfaction will be our permanent
motivation!


USER MANUAL

HAIRCARE

SPECIFICATIONS

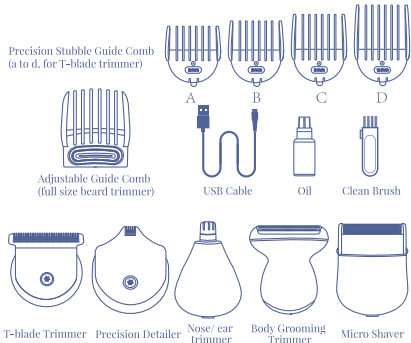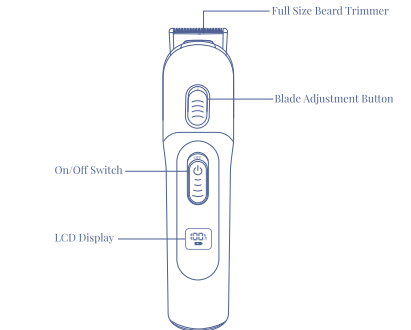


BASIC PARAMETERS

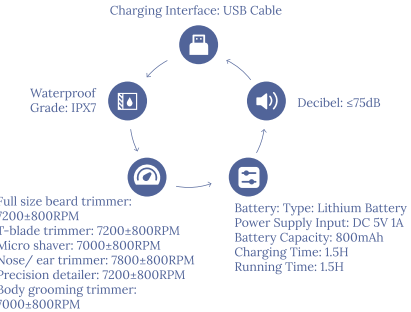


PRODUCT DESCRIPTION

- 1 Fully charge the trimmer before you use it for the first time or after not using it for a long period (When charging, please use a power adapter with an output voltage not higher than 5V 1A).
- 2 Charging and LED
 - (1)The battery symbol flashes when charging, and it shows 100% when fully charged.
 - (2)When the battery is less than 10%, LO flash. When the battery is exhausted, the battery symbol will flash 5 times and then automatically shut down.
- 3 Cleaning and Maintenance
 - (1)Turn off the trimmer before cleaning. Gently brush off the remaining hair with a small brush.
 - (2)The waterproof grade of the shaver is IPX7, which allows washing the entire body, comb, and blades under running water.

- (3)Let the trimmer and combs dry with a clean cloth before installing and charging to prevent accidents.
- (4)Store the dry trimmer in a box.
- 4 The cutter head adjustment button slides up and down to adjust the cutter head distance.
- 5 Install and Remove the Cutter Head
 - (1)Align the cutter head with the trimmer body and install by gently pressing it into the slot, until it clicks (Figure 1).
 - (2)Push out the cutter head in the direction shown to complete the removal (Figure 2).

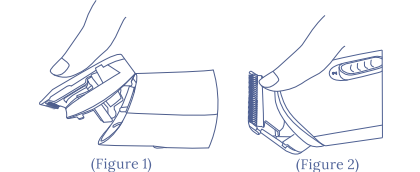

- 6 Install and Remove the Guide Comb
 - (1)Make sure the trimmer is turned off before you install or remove the guide comb.
 - (2)Align the combs with the grooves on both sides of the fuselage, and gently press into the grooves to install them (Figure 3). To remove, hold the comb by its sides and gently wiggle it out (Figure 4).

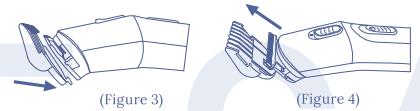

- 7 To avoid potential problems such as loud noise or high temperature during use, we recommend dripping a small amount of oil on the blade head after using 3 to 5 times. We also advise replacing the blade head once a year to improve your user experience.

WARRANTY AND SERVICE

Warranty Description
From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

After-sales Service:
If you have any query about our products, please feel free to contact us.

ISSUES CONTACT INFO:	
SUPRENT After-sales Service	support@suprent.com
Official Website:	www.suprent.com
Social Medias Facebook:	@suprentinfoInstagram @suprent_official
Amazon Customer Service	Amazon's home page--At the bottom--Help--Need more help--Contact Us
Amazon Returns or Replace Items	Amazon's home page--Hamburger button-- Menu--Your orders--Find our products--Order details--Need help with your item--Return or replace items