



SCULPT NEW POSSIBILITIES

THE STARE
PROFESSIONAL HAIR
CLIPPER HC256

IF YOU NEED A MORE DETAILED
MULTILINGUAL MANUAL VERSION
(US/CA/EU/UK/JP), PLEASE SCAN THE
FOLLOWING OFFICIAL QR CODE

 
 


SCAN & GET EXTRA WARRANTY



SUPRENT After-sales Service:
support@suprent.com

SPECIFICATIONS

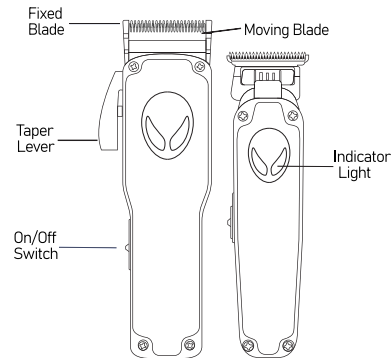

Gulde Combs*9



USB-C
Cable



Cleaning
Brush



Oil

BASIC PARAMETERS

- Speed: 6000±200RPM
- Decibel: ≤60dB
- Type: Lithium Battery
Battery Capacity: Hair Clipper 2000mAh;
Detail Trimmer 1200mAh
- Interface: Type-C
Power Supply Input: DC 5V 1A
ChargingTime: Hair Clipper 180 min;
Detail Trimmer 150 min
- Running Time: Hair Clipper 120 min;
Detail Trimmer 120 min

PRECAUTIONS

Please read this instruction manual carefully before use and keep it for future reference. When charging, please turn the switch to the "0" position first, connect the plug to the device, and then connect it to the socket.

- Never leave the trimmer unattended when plugged in.
- Always unplug the trimmer immediately after use, except when charging.
- Do not pull, twist, or tangle the power cord on the device.
- Keep the power cord and trimmer away from hot surfaces.

 
- Do not place or store the trimmer where it can fall or be pulled into a bathtub or sink. Do not drop into or immerse in water or other liquids.
- Do not use the trimmer while bathing or showering.
- Do not use the trimmer if it is damaged, or if it has fallen into water and does not work properly.
- Never insert any object into any opening of the appliance.
- Use the trimmer only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate the trimmer.
- Do not use this appliance outdoors, or in areas where aerosol (spray) products are being used or where oxygen is administered.
- Do not use this product if the blades are chipped or damaged, as this may cause cuts. Before each use, make sure that the blades are properly aligned and oiled.
- Close supervision is necessary when the appliance is used on or near children, or by persons with reduced physical, sensory or mental capabilities, or disabilities.
- Keep the lubricant out of reach of children and pets.

USE INSTRUCTIONS

- 1.When there is power and working, the blue light is always on;
- 2. When the power is low, below 10%, the red light flashes;
- 3. When charging, the red light is always on;
- 4. When fully charged, the blue light is always on;
- 5. When plugged in and in use, the blue li ght is always on;

GUIDE COMB INSTALLATION

Firstly align and secure the top of the guide comb with the blade head, and then snap the bottom of the guide comb into the bottom of the blade head. When disassembling, firstly pull the bottom of the guide comb apart, and then remove the guide comb.



CLEANING

To maintain optimum performance,please clean the clippers after each use.
1.Use the cleaning brush provided to clean any residual hair from the blades;
2.Remove the guide comb, and clean them under running water. Please ensure they are thoroughly dry before storage or further use.
3.Oil the blades after each use to ensure optimum cutting performance.
IMPORTANT: The blades must be cleaned and oiled regularly to function properly, failure to clean and oil the blades regularly will void the warranty. The clippers are not whole body waterproof, do not rinse the blades under running water.

OIL

 
For better cutting performance, it is highly recommended to keep the blade oiled after each use.
1.Unscrew the cap of the oil bottle and cut off the end of the plastic tube with scissors.
2.Remove the blade cover and turn on the clipper.
3.Hold the clipper at a 45-degree angle, squeeze the tubing lightly, and drip some amount of the oil directly onto the blades.
4.Leave the clipper on for a few more seconds to allow the oil to spread thoroughly along the length of the blade.

5.Turn off the hair clipper and gently wipe with a cloth to remove excess oil before use.
Important:It is recommended to replace the blade head once a year for better cutting performance.After a 40-minute continuous use, it generally heats up slightly.Lease turn off the clipper and restart it after it cools down. If the heat is abnormally high, please stop using it immediately and cool it down for a while before restarting. If the heat persists, please contact customer service via support@suprent.com.

HAIR CLIPPER BLADE ATTACHMENT AND REMOVAL

If there is excessive noise, or you need to replace the blades, please follow the below steps:
Step 1. Turn off the hair clipper and adjust the taper (see picture A).
Step 2. Disassemble the screws and the fixed blade. Keep the screws.
Step 3. Disassemble the small moving blade on the plastic shaker and replace it with a new one (see picture B).
Step 4. Assemble and secure the fixed blade with the screw lightly. Make sure that the end of the moving blade teeth is about to 1/32" (1mm)to 1/16" (1.5mm) lower than the end of the fixed blade as shown in picture C and that the moving blade is centered and parallel to the fixed blade.

Warm Tips: The top edge of the fixed blade must be at least 1/32" (1 mm) higher than the top edge of the moving blade and as centered as possible. This is important to prevent the clippers from cutting too close or pinching the skin. Be sure to add a few drops of oil to the blades before running. Don't forget to tighten the screws after aligning the blades.

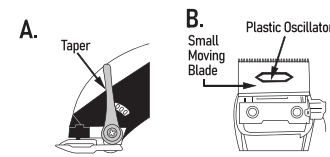


By following the above steps, you can ensure that your clippers will cut hair smoothly and safely.
If you still have troubles, please contact SUPRENT SUPPORT Team for a detailed instruction video via support@suprent.com

HOW TO ADJUST THE TAPER?

The tapered rod on the hair clipper can control the length of the hairstyle. It can be adjusted from 0.5、1.2、1.8、2.5、3mm.How to adjust taper :
1. Slowly push the taper rod down to get a longer hair length.

 2. Push the taper rod up to get a shorter hair length.

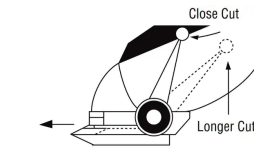

ECO-FRIENDLY PACKAGE:

SUPRENT advocate being responsible for the earth and society and hope that available resources can be recycled to give value again by professional treatment, thus preventing the earth from waste heaping and environmental pollution. Therefore SUPRENT uses secondary recycled paper and soy-based inks on all of our packages and blisters to make a contribution to environmental protection and sustainable development.

WARRANTY AND SERVICE

Warranty Description

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

If you have troubles, please contact SUPRENT Support Team support@suprent.com.