



SUPERIOR ENTICING

More than a skill, barbering is a fusion of artistry, dedication, and dreams. We're here to empower cuts and sculpt visions into reality.

NEBULA
HIGH VELOCITY WHISPER-DRIVEN MOTOR
HAIR CLIPPER & TRIMMER SET HC536

SCAN TO DOWNLOAD MANUALS
IN OTHER LANGUAGES
(DE/FR/IT/ES/JP)



SCAN & GET EXTRA WARRANTY



SUPRENT After-sales Service:
support@suprent.com

Website: www.suprent.com

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE.
Follow all safety precautions and instructions in this manual.

⚠ WARNING

To reduce the risk of electric shock, injury, fire, death, and property damage, please observe the following safety precautions:

- Never leave the product unattended while it is plugged in.
- This product is not intended for use by persons (including children) with physical, sensory, or mental disabilities, or those lacking experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure they do not play with the product; otherwise, accidents or personal injury may occur.
- Use this product only as described in this manual.
- This product is intended for hair trimming only; do not use it for any other purpose.
- Do not use this product if the power cord or plug is damaged, if it is not working properly, if it has been dropped or damaged, or if it has fallen into water.
- This product contains a built-in rechargeable battery. Do not throw it into fire or expose it to heat. Do not charge, use, or leave it in high-temperature environments, as this may cause overheating, fire, or explosion.
- Never drop or insert any object into any opening of the device.
- Do not use this product where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this product with damaged or missing comb teeth, or a damaged blade, as injury may occur.
- Always attach the power cord to the device first, then to the outlet. To disconnect, turn all controls to the "OFF" position, then remove the plug from the outlet.
- Blades may become hot after prolonged use; use with caution.

- Do not touch both terminals on the product with metal objects and/or body parts simultaneously to avoid a short circuit. Keep the product away from children; failure to comply may result in fire or serious personal injury.
- When cleaning, always unplug the power adapter from the household power outlet; otherwise, electric shock or personal injury may occur.
- Regularly wipe the power plug, power cord plug, and charging base socket with a dry cloth to prevent dust accumulation. Failure to do so may lead to insulation failure caused by moisture, resulting in a fire.
- Keep the product dry. Do not immerse the product in water or wash it with water. Do not place the product over or near a sink or bathtub filled with water; otherwise, electric shock or fire due to short circuit may occur.
- Do not damage, modify, forcefully bend, pull, or twist the power cord. Additionally, do not place heavy objects on or squeeze the power cord; otherwise, electric shock or fire due to short circuit may occur.
- Do not use any device other than the supplied power cord and charging base to charge this product. Furthermore, do not use the supplied power cord and charging base to charge other products, as this may lead to burns or fire due to short circuit.
- Plug the charger or charging cable directly into an outlet; do not use an extension cord.
- If the temperature is outside the recommended charging range (10°C–35°C), charging time may be extended or the product may fail to charge properly.
- Do not store the product within reach of children or infants. Do not allow them to touch or operate the product, as they may accidentally swallow components such as blades or lubricant containers, which may cause accidents or personal injury.
- If the specialized lubricant is accidentally swallowed, do not induce vomiting. Drink plenty of water and seek medical attention immediately. If the lubricant gets into the eyes, rinse immediately with running water and seek medical attention.
- Properly dispose of the product's packaging bags and keep them away from infants and young children to avoid the risk of suffocation.
- Do not modify or attempt to repair the product or the battery pack yourself, except as indicated in the instructions for use and maintenance.

PRECAUTIONS FOR WASTE BATTERY RECYCLING AND DISPOSAL

- This rechargeable battery is for use with this product only. Do not use it in other products.
- Do not charge the battery once it has been removed from the product.
- Do not heat the battery or throw it into fire.
- Do not hit, disassemble, modify, or scratch the battery with fingernails.
- Do not connect the positive and negative terminals of the battery with metal objects.
- Do not carry or store the battery with metal jewelry such as necklaces or hairpins.
- Do not use or leave the battery in high-temperature environments (such as direct sunlight or near other heat sources).
- Do not peel off the battery casing, as this may lead to overheating, fire, or explosion.
- After removing the rechargeable battery, keep it out of reach of children and infants. Accidental swallowing may cause injury; if this occurs, seek medical attention immediately.
- If battery electrolyte leaks and comes into contact with the eyes, do not rub the eyes. Rinse thoroughly with clean water (such as tap water) and seek medical attention immediately.

STORAGE REQUIREMENTS



- Do not store this product in environments below 10°C or above 35°C. Do not expose the product or battery to extreme temperatures to avoid damage or safety risks.

EXPLANATION OF SYMBOLS

- The following symbol indicates: a specific detachable power supply unit is required to connect this product to the power source. The model identification of the reference power supply unit is marked next to the symbol.



SPECIFICATIONS

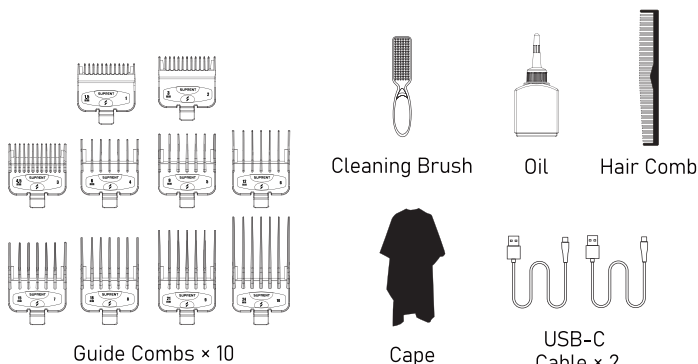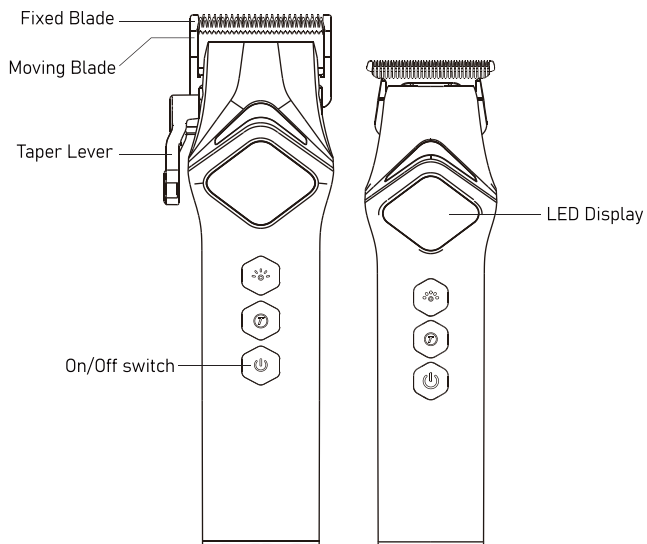

BASIC PARAMETERS

Noise Level : ≤ 70 dB

Charging Interface : USB-C

Speeds : 6000 / 8000 RPM

Battery Type : Lithium-ion Battery
Power Input : DC 5 V 1 A
Battery Capacity : Clipper 2000 mAh; Trimmer 1200 mAh
Charging Time : Clipper Approx. 150 min; Trimmer Approx. 120 min
Running Time : Clipper Approx. 150 min; Trimmer Approx. 120 min


USING INSTRUCTIONS

Press the power button to turn on the device. The digital display will light up, showing the real-time battery percentage. When the remaining battery level is 10%, the "10%" numeric symbol flashes. When the battery is fully depleted, the display will show "00" and the device will shut down automatically. During charging, the display shows the real-time battery level as the percentage increases.

Charging Method :
Connect the USB-C cable directly to the hair clipper/trimmer.


ADJUST THE TAPER LEVER

The taper lever on the clipper adjusts the length of the hair remaining. The adjustment range includes 0.5 mm, 1 mm, 2 mm, 3 mm, and 3.5 mm (Figure 1). For longer hair : Slowly push the taper lever down. For shorter hair : Push the taper lever up.

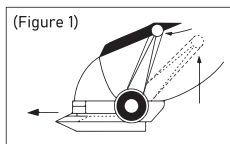

GUIDE COMB INSTALLATION

To Install: Align and secure the top of the guide comb with the blade head, then snap the bottom of the comb onto the base of the blade head (Figure 2). To Remove: Pull the bottom of the guide comb away from the blade first, then lift it off the blade head (Figure 3).

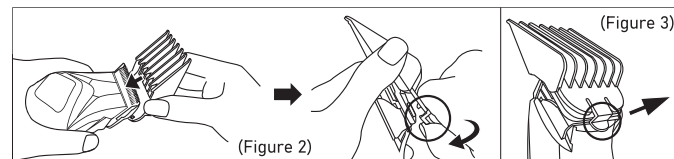


CLIPPER BLADE REPLACEMENT AND ADJUSTMENT

- 1) Turn off the clipper and push the taper lever upward to the top position (close-lever).
- 2) Remove the screws and the fixed blade. Keep the screws in a safe place.
- 3) Remove the moving blade from the oscillating plastic holder and replace it with a new one (Figure 4).
- 4) Reattach the fixed blade with the screws, tightening them lightly at first.
- 5) Adjust the blade gap to between 1 mm and 2 mm. Ensure the moving blade is centered and parallel to the teeth of the fixed blade (Figure 5).

Important Tip: The top edge of the fixed blade must be at least 1 mm higher than the edge of the moving blade. This is critical to prevent the moving blade from touching or cutting the skin. Always apply a few drops of lubricating oil to the blades before use. Fully tighten the screws once the blades are aligned.


If you still have problems, please contact the SUPRENT Support Team at support@suprent.com for instructional videos.

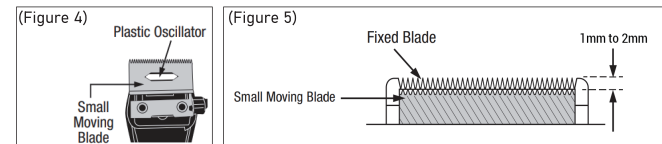

TRIMMER BLADE GAP ADJUSTMENT

- 1) Use a screwdriver to loosen the two screws on the fixed blade (Figure 6), then remove the blade assembly from the trimmer body.
- 2) Use a screwdriver to remove the two small screws on the moving blade (Figure 7).
- 3) Adjust the position by pushing the black plastic part on the moving blade (Figure 8) until the edge of the moving blade is recessed slightly below the fixed blade.
- 4) The teeth of the moving blade should sit approximately 1 mm below the upper edge of the fixed blade teeth (Figure 9). Improper alignment may cause nicks or cuts.
- 5) CAUTION: Do not let the moving blade extend beyond the fixed blade, as this will cause skin cuts.
- 6) Gently tighten the two screws on the moving blade. If the adjustment is unsatisfactory after testing, repeat the process.


If you still have problems, please contact the SUPRENT Support Team at support@suprent.com for instructional videos.

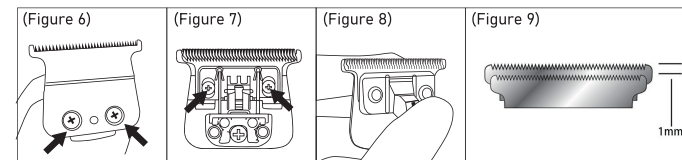

BLADE LUBRICATION PROTOCOL

For the best cutting performance, we highly recommend oiling the blades after every use.

- 1) Open the oil bottle.
 - 2) Remove the blade guard.
 - 3) Hold the oil tube at a 45° angle and apply 5 drops of oil directly to the center of the blade (Figure 10).
 - 4) Turn on the clipper for 10 seconds to distribute the oil evenly.
 - 5) Wipe off any excess oil with a lint-free cloth.
- Important Tip:** It is recommended to replace the blade once a year for optimal cutting performance.

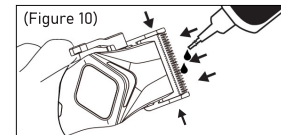

CLEANING INSTRUCTIONS

To maintain optimal performance, clean the unit after each use. Use the included cleaning brush to remove hair debris from the blades. Remove the guide combs. They may be rinsed under running water; ensure they are completely dry before storage or use. Note: Lubricate the blades after cleaning to maintain peak performance.

ECO-FRIENDLY PACKAGING

SUPRENT advocates for responsibility toward the Earth and society. We believe that existing resources should be professionally recycled and repurposed to create new value, thereby preventing landfill accumulation and environmental pollution. As a result, SUPRENT uses recycled paper and soy-based inks for all our packaging, contributing to environmental protection and sustainable development.

WARRANTY AND SERVICE

From the date of purchase, the product's main components are covered by a 1-year limited warranty (accessories excluded). Warranty coverage is void for product malfunctions caused by accidental damage, unauthorized repairs, improper storage, or other human-induced damage. For any issues, please contact the SUPRENT Support Team at support@suprent.com