



SUPERIOR ENTICING

More than a skill, barbering is a fusion of artistry, dedication, and dreams. We're here to empower cuts and sculpt visions into reality.

BARBER PROFESSIONAL
3-TOOL SYSTEM
HC597BX
CLIPPER • TRIMMER • SHAVER

IF YOU NEED A MORE DETAILED
MULTILINGUAL MANUAL VERSION
(US/CA/EU/UK/JP), PLEASE SCAN THE
FOLLOWING OFFICIAL QR CODE





SCAN & GET EXTRA WARRANTY



SUPRENT After-sales Service:
support@suprent.com

SPECIFICATIONS

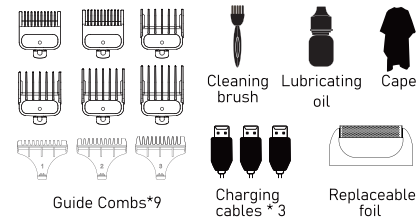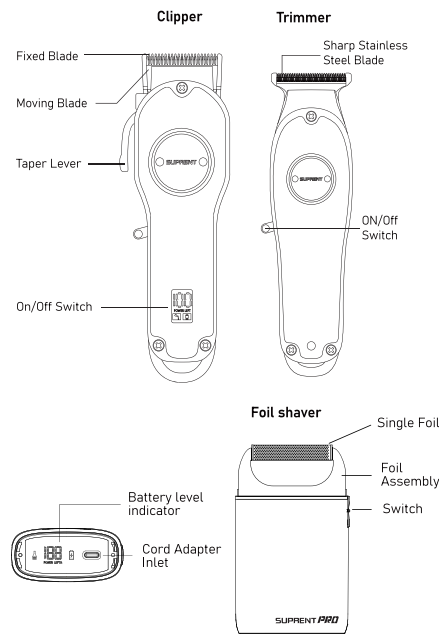

BASIC PARAMETERS

Parameter items	Clipper	Trimmer	Foil Shever
Power Supply Input	DC 5V 1A	DC 5V 1A	DC 5V 1A
Charging Interface	USB	USB	TYPE-C
Speed	5500RPM	6000RPM	7500RPM
Battery Type	Lithium Battery	Lithium Battery	Lithium Battery
Battery Capacity	2500mAh	1400mAh	600mAh
Charging Time	4 hour	3 hour	2 hour
Running Time	5 hour	2 hour	2 hour
Decibel	≤60dB	≤60dB	≤75dB
Waterproof Grade	Not waterproof	Not waterproof	IPX5

SAFETY PRECAUTIONS

- Before each use, check the shaver for any obvious damage. Do not use the device if any cracks, exposed wires, or other signs of damage are found.
- This set of products is designed for beard and hair trimming. Avoid using the product on other parts of the body or for unintended purposes to avoid injury.
- If the product exhibits any abnormal behavior, such as abnormal sounds, odors, or overheating, stop using it immediately and contact SUPRENT customer support for help.
- When charging, turn off the hair clipper/trimmer first, connect the plug to the device, and then to the socket.
- Do not use in a humid environment, high temperature above 40 °C, and low temperature below -20 °C to prevent electric shock.
- Do not use this product if the blade is missing teeth or damaged, otherwise you may get cut. Before each use, make sure the blade is properly aligned and oiled.
- Close supervision is required when the device is used on or near children, people with limited physical, sensory or mental abilities, or people with disabilities.
- Keep lubricating oil away from children and pets.
- When not in use, please store the product in a dry and cool place. Avoid exposing the shaver to direct sunlight or extreme temperatures.

USING INSTRUCTIONS

During operation, the display activates, showing real-time battery percentage.
At <10% battery, the charging indicator flashes red. While charging, the charging indicator remains

- Warning:**
 - 1. Charge only with a 5V/1A adapter (not included).
 - 2. Ensure the device is powered off before charging.
 - 3. Adapter may become warm during use; this is normal.
 - 4. For optimal battery health: Recharge for 2 hours every 6 months during storage.

FOIL SHAVER INSTRUCTIONS

(1) Instructions For Use For Shaver

Users with sensitive skin, post-shave inflammation, or skin allergies should conduct a patch test on the forearm or leg before facial use.
Remove the protective cap and activate the device. Stretch skin taut with fingers, hold the shaver perpendicular to the skin surface, and move slowly against hair growth in steady strokes.
Power off and clean the shaver after each use.

- Warning:**

Do not apply excessive pressure – this may cause skin irritation, device overheating, and suboptimal shaving results.

 - First shorten with a trimmer
 - Then shave for smooth results

(2) Cleaning instructions

Please make sure the shaver is turned off for cleaning and maintenance;
1. Lift up the knife screen assembly, and then remove the aluminum foil assembly (see Figure 1);
2. Use a brush to clean the hair debris on and around the aluminum foil component, blade (see Figure 2);
3. If necessary, you can remove the aluminum foil component and place it under water to rinse (note: the aluminum foil component needs to be removed before rinsing) (see Figure 3);
4. After ensuring that all parts are dry, snap in the blade and knife net assembly.



(3) Replace aluminum foil assembly


1. Hold both sides of the foil head assembly and gently pull it upwards from the shaver assembly (see Figure 4).
2. Remove the replacement foil head assembly from the packaging. Align the replacement foil head assembly with the blade. Carefully move the replacement foil head assembly down towards the shaver unit until it clicks securely into place. Please be careful not to damage the foil or blade when installing.
3. After replacing the cutter head assembly, open the shaver and test whether it works normally;

(4) Replace shver blade

1. To remove the cutter, place your fingers on the sides and gently pull up and away from the drive shaft (see Figure 5) .

2. To replace the cutter, please take out the new cutter from the package. Align the cutter with the drive shaft and push down gently until it clicks into place.
3. After replacing the blade, open the shaver to test whether it works normally;

Important Tips: Please make sure the product is turned off before replacing it.

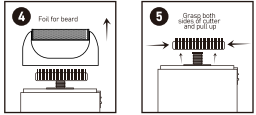

HAIR CLIPPER & TRIMMER MAINTENANCE

(1) Guide comb installation

Firstly align and secure the top of the guide comb with the blade head, and then snap the bottom of the guide comb into the bottom of the blade head. When disassembling, firstly pull the bottom of the guide comb apart, and then remove the guide comb (see Figure 6).




(2) Replacement (removal) of blade set

Step 1. Adjust the taper to the position shown in Figure 7.

Step 2. Remove the screws and the fixed blade. Save the screws.
Step 3. Lift off the small moving blade and place the new blade on the plastic oscillator (see Figure 8). Step 4. Replace the fixed blade using the screws and lightly tighten them. Adjust the teeth, as shown in Figure 9, to a gap of 1/64" (0.3mm) to 1/32" (0.8 mm). The small moving blade should be as centered and as parallel as possible to the fixed blade's teeth.

Important Tips:
The top edge of the fixed blade must be a minimum of 1/64" (0.3mm) higher than the top edge of the moving blade and as centered as possible. This is important so that the moving blade does not come in contact with the skin. Be sure to add a few drops of oil to the blades before running the clipper. Don't forget to tighten the screws after the blades have been aligned.

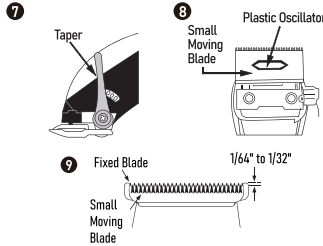


(3) Assembling or Replacing the Blades:

1. Using a screwdriver, unscrew the two small screws on the moving blade (see Figure 10).
2. Use your fingers to adjust the distance between the moving blade and the fixed blade until the moving blade is flush with the fixed blade or slightly lower than the fixed blade.

3. Make sure the blades are aligned correctly. The teeth of the moving blade should be slightly lower than the upper edge of the fixed blade ruler – about 1 mm apart (if the blade is not aligned correctly, you may cut or scratch your skin when trimming).
4. Make sure the moving blade does not extend beyond the fixed blade (if the moving blade extends beyond the fixed blade, it may cut your skin).
5. After adjusting the blade to zero clearance and the position you like, gently tighten the two screws of the fixed blade. If the blade is not adjusted to your satisfaction after testing, repeat the adjustment process.

Important Tips:
When aligning the blades, make sure they are properly positioned and secured.
Pay attention to the alignment of the moving blade and the fixed blade to ensure they are in the correct position. Tighten the screws securely to prevent the blades from coming loose during operation.

If you encounter any difficulties or require further assistance, please contact the SUPRENT SUPPORT Team for a detailed instruction video at support@suprent.com. We are here to assist you with any questions or issues you may have.

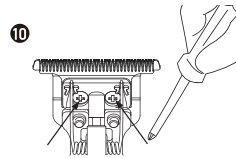

(4) Cleaning instructions


To maintain optimal performance, clean the device before and after every use:

1. Use the provided cleaning brush to remove hair residue from blades.
2. Detach guide combs – Rinse combs under running water.3. Ensure thorough drying before storage or reuse.
4. Lubricate blades after each use for peak cutting performance.

(5) Blade lubrication protocol

1. Prepare oil: Uncap tube, trim 2mm tip with scissors.
2. Remove blade guard.
3. Hold oil tube at 45°, apply 5 drops directly to blade center.
4. Run device for 10 seconds to distribute oil (see Figure 11).
5. Wipe excess oil with lint-free cloth before use.

Important Tips:
●Blades MUST be regularly cleaned and lubricated for proper function.
●Warranty void if blades are not cleaned/oiled as specified.
●NEVER rinse blades with water.

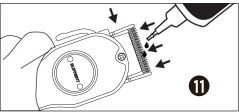

ECO-FRIENDLY PACKAGE

SUPRENT advocate being responsible for the earth and society and hope that available resources can be recycled to give value again by professional treatment,

thus preventing the earth from waste heaping and environmental pollution. Therefore SUPRENT uses secondary recycled paper and soy-based inks on all of our packages and blisters to make a contribution to environmental protection and sustainable development.

WARRANTY AND SERVICE

Warranty Description

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

If you have troubles, please contact SUPRENT Support Team support@suprent.com.