

SUPRENT *PRO*

If you need a more detailed
multilingual manual version
(US/CA/EU/UK/JP), please scan
the following official QR code



Beyond Master

BEYOND MASTER

Everything in the process
makes who you are. So we're here,
to witness the birth of masterpiece.



SUPRENT PRO,
the Best Partner of Masters.

THE PHANTOM - C

PROFESSIONAL
HAIR CLIPPER HC615

USER MANUAL

SPECIFICATIONS

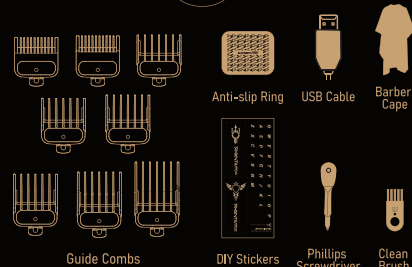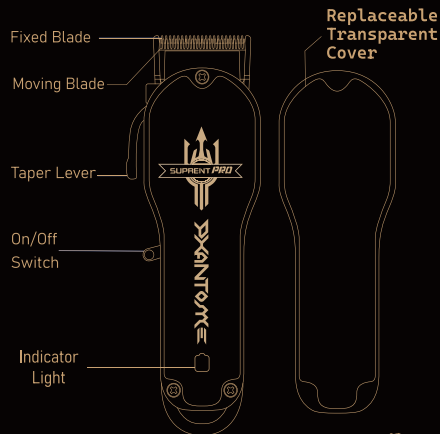

BASIC PARAMETERS

- Motor: 6800RPM
Operating Voltage: 3V
- Charging Time: 4H
Running Time: 3H
Charging Interface: USB Cable
- Decibel: < 60dB
- Battery Type: Lithium Battery
Power Supply Input: DC 5V 1A
Battery Capacity: 2500mAh

PRODUCT DESCRIPTION

① Fully charge the trimmer before you use it for the first time or after not using it for a long period(When charging, please use a power adapter with an input voltage not higher than 5V 1A).

② USE FUNCTION DESCRIPTION

Motor

Work as the first gear, the speed is 6800rpm.

With Soft Start Function:

1.When working: The blue light is always on;The remaining 10% power starts to flash red;

2.When charging: The charging red light is always on;Charging is complete, the red light is off and the blue light is on;

3.Blocking protection: Automatic shutdown for 3 seconds at 3A current; at this point the machine should be shut down immediately and the cause of the blockage checked;
Charging high voltage protection: After 6.5V for protection; the charging plug can be replaced.
During these two types of protection, the red light and blue light will flash alternately.

Charge and Discharge Protection

Discharge 3.2V protection, charge 4.2V protection.

③ GUIDE COMB INSTALLATION

Firstly align the top of the guide comb with the cutter head and fasten the position, and then forcefully buckle the bottom of the guide comb into the bottom of the cutter head. When disassembling, firstly pull the bottom of the guide comb apart, and then remove the guide comb.

④ CLEANING

It is not necessary to clean the cutter head frequently,It just needs a brush to clean the excess hair for daily care. Since the body is not waterproof, please remove the cutter head and clean it separately (It is recommended to remove the cutter head with the assistance of professionals).

⑤ When the trimmer is used for 2 hours totally, some problems may occur, such as relatively loud noise,dullness, dropping in shear force or high temperature, then the cutter head needs dripping care. It is recommended to replace the cutter head once a year.

⑥ When the product works continuously for about 40minutes, the temperature will generally rise. Pleaseturn off the trimmer and restart after it cools down. Ifthe body temperature is abnormally high, please stopusing it immediately and cool it down for a whilebefore restarting. If the heat persists, please contactcustomer service.

WARRANTY AND SERVICE

Warranty Description

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

After-sales Service

If you have any query about our products, please feel free to contact us.

Issues Contact Info

SUPRENT After-sales Service	support@suprent.com
Official Website	www.suprent.com
Social Medias	Facebook @suprentinfo Instagram: @suprent_official
Amazon Customer Service	Amazon's home page--At the bottom--Help--Need more help--Contact Us
Amazon Returns or Replace Items	Amazon's home page--Ham-burger button-- Menu--Your orders--Find our products--Order details--Need help with your item--Return or replace items