

SUPRENT **PRO**

BEYOND MASTER

Everything in the process makes who you are.
So we're here to witness the birth of the masterpiece.
SUPRENT PRO, the Best Partner of Masters.

THE PHANTOM

PROFESSIONAL HAIR CLIPPER HC616

IF YOU NEED A MORE DETAILED
MULTILINGUAL MANUAL VERSION
(US/CA/EU/UK/JP),PLEASE SCAN THE
FOLLOWWING OFFICIAL QR CODE




SCAN & GET EXTRA WARRANTY



SUPRENT After-sales Service:
support@suprent.com

SPECIFICATIONS

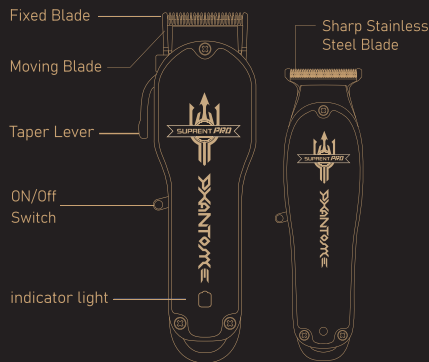

BASIC PARAMETERS

- Speed: Hair Clipper 6800RPM; Finish Trimmer 6000RPM±10%
- Charging Interface: USB Cable
- Decibel: ≤60dB
- Type: Lithium Battery
Power Supply Input: DC 5V 1A

Battery Capacity: Hair Clipper: 2500mAh;
Finish Trimmer: 1400mAh;

ChargingTime: Hair Clipper: 4H; Finish Trimmer: 2H;
Running Time: Hair Clipper 3H; Finish Trimmer: 3H;

PRECAUTIONS

Please read this instruction manual carefully before use and retain it for future reference.

- When charging, please turn the switch to the "0" position first, connect the plug to the device, and then connect it to the socket.
- Never leave a trimmer plugged in unattended.
- In addition to charging, please unplug the trimmer immediately after use.
- Do not pull, twist or wrap the power cord on the device.

- Keep the device power cord and trimmer away from heated surfaces.
- Do not place or store the trimmer where it may fall or be pulled into a bathtub or sink. Do not put or drop into water or other liquids.
- Do not use electrical appliances while bathing or showering.
- Do not use the trimmer or power cord when it is damaged or cannot work properly after falling into water.
- Never place or insert any object into any opening of the device.
- Use the trimmer only for its intended use as described in this manual. Do not use accessories other than those specified by the manufacturer. Do not use extension cords to operate the device.
- Do not use this device outdoors, or operate in places where aerosol (spray) products are used or oxygen is used.
- Do not use this product when the blade has missing teeth or is damaged, otherwise you may be cut. Make sure the blade is properly aligned and oiled before each use.
- Close supervision is required when this equipment is used on or near children, persons with limited physical, sensory or mental abilities, or persons with disabilities.
- Keep lubricants away from children and pets.

USE INSTRUCTIONS

- Working in first gear;
- With soft start function;
When working, the blue light is long-lighted; the Red light starts flashing when 10% of the power remains;
When charging, the red light is long-lighted; The red light is off and the blue light is on when charging is completed;

GUIDE COMB INSTALLATION

Firstly align and secure the top of the guide comb with the blade head, and then snap the bottom of the guide comb into the bottom of the blade head. When disassembling, firstly pull the bottom of the guide comb apart, and then remove the guide comb.

CLEANING

To maintain optimum performance, please clean the clippers after each use.

- Use the cleaning brush provided to clean any residual hair from the blades;
- Remove the guide comb, and clean them under running water. Please ensure they are thoroughly dry before storage or further use.
- Oil the blades after each use to ensure optimum cutting performance.
IMPORTANT: The blades must be cleaned and oiled regularly to function properly, failure to clean and oil the blades regularly will void the warranty. The clippers are not whole body waterproof, do not rinse the blades under running water.

OIL

For better cutting performance, it is highly recommended to keep the blade oiled after each use.

- Unscrew the cap of the oil bottle and cut off the end of the plastic tube with scissors.
- Remove the blade cover and turn on the clipper.

3. Hold the clipper at a 45-degree angle, squeeze the tubing lightly, and drip some amount of the oil directly onto the blades.

4. Leave the clipper on for a few more seconds to allow the oil to spread thoroughly along the length of the blade.

5. Turn off the hair clipper and gently wipe with a cloth to remove excess oil before use.

Important: It is recommended to replace the blade head once a year for better cutting performance.

6. After a 40-minute continuous use, it generally heats up slightly. Please turn off the clipper and restart it after it cools down. If the heat is abnormally high, please stop using it immediately and cool it down for a while before restarting. If the heat persists, please contact customer service via support@suprent.com.

HAIR CLIPPER BLADE ATTACHMENT AND REMOVAL

If there is excessive noise, or you need to replace the blades, please follow the below steps:

Step 1. Turn off the hair clipper and adjust the taper (see picture A).

Step 2. Disassemble the screws and the fixed blade. Keep the screws.


Step 3. Disassemble the small moving blade on the plastic shaker and replace it with a new one (see picture B).

Step 4. Assemble and secure the fixed blade with the screw lightly. Make sure that the end of the moving blade teeth is about to 1/32" (1mm) to 1/16" (1.5mm) lower than the end of the fixed blade as shown in picture C and that the moving blade is centered and parallel to the fixed blade.

Warm Tips: The top edge of the fixed blade must be at least 1/32" (1 mm) higher than the top edge of the moving blade and as centered as possible. This is important to prevent the clippers from cutting too close or pinching the skin. Be sure to add a few drops of oil to the blades before running. Don't forget to tighten the screws after aligning the blades.

By following the above steps, you can ensure that your clippers will cut hair smoothly and safely.

If you still have troubles, please contact SUPRENT SUPPORT Team for a detailed instruction video via support@suprent.com

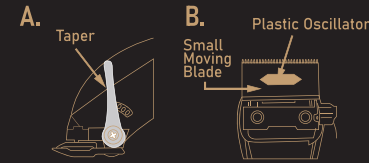


HAIR CLIPPER ADJUSTMENT TAPER

The tapered rod on the hair clipper can control the length of the hairstyle. It can be adjusted from 0.5mm-2mm.


How to adjust taper:

1. Slowly push the taper rod down to get a longer hair length.
2. Push the taper rod up to get a shorter hair length.

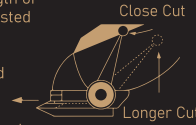

HOW TO ADJUST THE BLADE ON THE FINISH TRIMMER

1. Use a screwdriver to unscrew the two small screws on the fixed blade.
2. Adjust the distance between the moving and fixed blade with your fingers until the moving blade is flush with the fixed blade or slightly below the fixed blade.
3. Make sure the blades are properly aligned. The teeth of the moving blade should be slightly below the top edge of the fixed blade ruler, about 1 mm apart. If the blades are not aligned correctly, you may cut or scratch your skin when trimming.
4. Ensure that the moving blade does not extend beyond the fixed blade. If the moving blade extends beyond the fixed blade, you may cut your skin.
5. After adjusting the blade to your preferred position, gently tighten the two screws of the fixed blade. If the blade is not adjusted to your satisfaction after testing, please repeat the adjustment process.

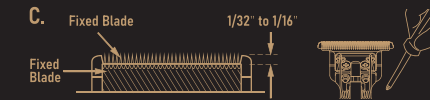

FACE COVER REPLACEMENT

1. Use the screwdriver provided with the product to unscrew the 3 screws on the cover;
2. Hold the knife head toward the palm of your hand, push

the mask to the right with your thumb, and then take the mask out of the machine;

3. Replace the required cover and align it with the edge of the bottom case of the fuselage. If the three screw holes are not aligned at this time, push up the cover from the charging hole to align the three screw holes;
4. Use a screwdriver to tighten the 3 screws;

Please note: Do not try to open the black inner cover after removing the front cover, as this may damage the

DIY STICKER TUTORIAL

1. First peel off the white isolation paper on the surface of the sticker, and then cut out the required pattern;
2. Soak in water until the sticker pattern can slide on the surface of the water paper (about 10 seconds);
3. Take out the pattern sticker and stick it to the desired position on the cover (the position can be moved and adjusted); fix one end of the pattern sticker with your fingers, and gently scrape the surface of the sticker with the removed cardboard or your fingers to fully discharge the bubbles and moisture in the sticker, ;
4. Place the cover in a ventilated and dry place to fully air dry (about 5 hours), then gently peel off the transparent film paper on the surface to complete the transfer;

Please note that after the sticker is applied, do not use hard objects or nails to scratch the pattern, rub it hard, or wipe it hard with a damp cloth to avoid causing the pattern to fall off! Do not try to tear off the transparent film paper before the sticker is fully dry to avoid unclear or incomplete pattern transfer!

ECO-FRIENDLY PACKAGE:

SUPRENT advocate being responsible for the earth and society and hope that available resources can be recycled to give value again by professional treatment, thus preventing the earth from waste heaping and environmental pollution. Therefore SUPRENT uses secondary recycled paper and soy-based inks on all of our packages and blisters to make a contribution to environmental protection and sustainable development.

COMMON PROBLEM

1. Unable to charge, and the red and blue lights flash alternately;
Please check the voltage of the power adapter and use the 5V 1A power adapter with the power cord provided with the product for charging;
2. It does not work when powered on, and the red and blue lights flash alternately
Reason: It may be that excessive hair on the cutter head triggers the stall protection function, causing the cutter head to be unable to operate;
Solution: Remove the cutter head according to the cutter head assembly and disassembly tutorial, clean the hair, and apply lubricant to restart the machine; if the problem cannot be solved after the operation, please contact SUPRENTPRO customer service.
3. Cutter head noise
Improper installation of the cutter head -----Reinstall the cutter head according to the tutorial;
If it has not been cared for for a long time ----- Carry out oil drip care on the blade head;
There is hair in the gap of the cutter head-----disassemble the cutter head to clean the hair;
If none of the above operations can solve the problem, please contact SUPRENT PRO customer service

WARRANTY AND SERVICE

Warranty Description
From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

If you have troubles, please contact SUPRENT Support Team support@suprent.com.