

SUPRENT PRO

BEYOND MASTER

Everything in the process makes who you are.
So we're here to witness the birth of the masterpiece.
SUPRENT PRO, the Best Partner of Masters.

THE MECHA
PROFESSIONAL HAIR CLIPPER HC625

IF YOU NEED A MORE DETAILED
MULTILINGUAL MANUAL BERSION
(US/CA/EU/UK/JP), PLEASE SCAN THE
FOLLOWING OFFICIAL QR CODE



 
SCAN & GET EXTRA WARRANTY




SUPRENT After-sales Service:
support@suprent.com

Website: www.suprent.com

PRODUCT

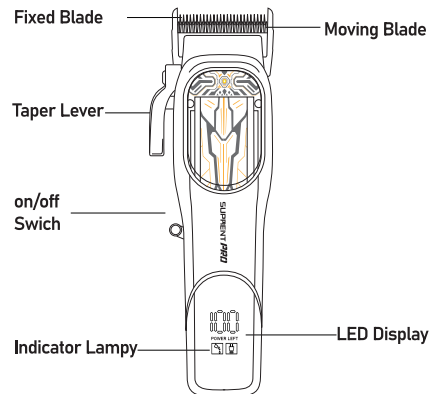

COMPONENT

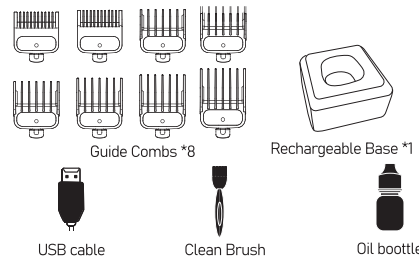 

BASIC PARAMETERS

- ② Type: Lithium Battery
- ② Power Supply Input: DC 5V 1A
- ⑩ Decibel: ≤70dB
- ③ Charging Interface: USB Cable

Hair Clipper
Speed: 7800RPM
Battery Capacity: 2500mAh
ChargingTime: 180 min
Running Time: 180 min

PRECAUTIONS

- (1) Please fully charge the trimmer before first use or after long-term use (please use a power adapter with an input voltage no higher than 5V 1A when charging);
- (2) Before charging, please ensure that the electric clipper switch is in the OFF position;
- (3) Never drop or insert any object into the charging port of the machine;
- (4) Do not operate this equipment if the power cord is damaged or damaged. If it is not working properly or it has been dropped or damaged or dropped into water. Please contact Suprent official customers;
- (5) Keep the power cord away from heating locations;

- (6) Using USB cables not sold by Suprent may cause risks of fire, electric shock or personal injury;
- (7) Do not use it outdoors or operate in places where there are aerosol (spray) products or where oxygen is being used;
- (8) Do not use this product if the blade is damaged or broken, as it may harm the skin;
- (9) Improper reassembly may result in risk of electric shock or fire. If repair is required, please contact Suprent official customer;
- (10) The battery in this product is designed to provide maximum trouble-free life. However, like all batteries, it will eventually wear out. Do not attempt to replace the battery. When repair or replacement is needed, please contact Suprent official customers;
- (11) Discarded batteries may be harmful to the environment. Many communities offer recycling or battery service collections. Please contact your local government for disposal information;
- (12) This equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision regarding use or instructed to operate the equipment by a person responsible for its safety.

CHARGING

- 1) When working, the display is always on and displays the real-time battery percentage ;
- 2) When the battery level is less than 10%, the charging logo flashes;
- 3) When charging: The charging logo is always on, and the real-time battery percentage is swept from bottom to top. When fully charged, the display shows 100, the numbers stop scanning, and the numbers and charging logo remain on.

GUIDE COMB INSTALLATION

Firstly align and secure the top of the guide comb with the blade head, and then snap the bottom of the guide comb into the bottom of the blade head. When disassembling, firstly pull the bottom of the guide comb apart, and then remove the guide comb.



 
BLADE REPLACEMENT

- 1) Turn off the hair clipper and adjust the taper;
- 2) Remove the screws and retaining blade. Save screws;

- 3) Remove the small movable blade from the plastic oscillator and replace it with a new one;
- 4) Replace the fixed blade using the screws and tighten lightly. As shown in Figure C, adjust the teeth to have a gap of 1/32 in. (1 mm) to 1/16 in. (1.5 mm) with the small moving blade as centered and parallel to the fixed blade's teeth as possible.

Note: The top edge of the stationary knife must be at least 1/32 inch (1 mm) higher than the top edge of the moving knife and as centered as possible. This is important so that the moving blade does not come into contact with the skin. Be sure to add a few drops of lubricant to the blade before operation. After aligning the blades, don't forget to tighten the screws.

If you are still having issues, please contact the SUPRENT support team at support@suprent.com for a detailed instruction video.

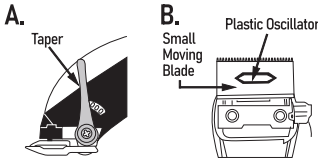

ADJUST TAPER

The taper rod on the hair clipper can control the length of the hair style. There are 5

- adjustment levels: 0.8-1.2-1.8-2.4-3.0 mm.
- 1) Slowly push the taper rod downward to obtain longer hair length;
 - 2) Push the tapered rod upward to obtain shorter hair length.

 
CLEANING

- To maintain optimal performance, equipment should be cleaned after each use.
- 1) Use the provided cleaning brush to clean the remaining hair on the blade;
 - 2) Remove the limiting combs, which can be rinsed under running water to ensure they are completely dry before storage or further use;
 - 3) Oil the blade after each use to ensure optimal cutting performance;
- IMPORTANT: The blade must be cleaned and oiled regularly to function properly, failure to clean and oil the blade regularly will void the warranty, do not rinse the blade

OIL

- For optimal cutting performance, it is highly recommended to oil the blade after each use.
- 1) When using oil for the first time, unscrew the cap and cut off the end of the plastic tube with scissors;
 - 2) Remove the blade guard and open the device;

- 3) Hold the scissors at a 45-degree angle, gently squeeze the oil tube, and then drip lubricant on the blade as shown by the arrow in the figure;
- 4) Leave the device on for a few more seconds to allow the oil to spread thoroughly along the length of the blade;
- 5) Before using on your hair, please turn off the hair clipper and gently wipe it with a dry cloth to remove excess oil.

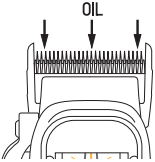

ECO-FRIENDLY PACKAGE:

SUPRENT advocate being responsible for the earth and society and hope that available resources can be recycled to give value again by professional treatment, thus preventing the earth from waste heaping and environmental pollution. Therefore SUPRENT uses secondary recycled paper and soy-based inks on all of our packages and blisters to make a contribution to environmental protection and sustainable development.

WARRANTY AND SERVICE

Warranty Description:

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

If you are satisfied with our product and service, please feel free to share your user experience. If you have any further queries about our product, you are welcome to contact us without any hesitation. We will always be here assisting you.

SUPRENT After-salesService	support@suprent.com
Website	www.suprent.com
Social Media	Facebook:@suprentinfo
Instagram	@suprent_official
Youtube	@suprent