



SUPERIOR ENTICING

More than a skill, barbering is a fusion of artistry, dedication, and dreams. We're here to empower cuts and sculpt visions into reality.

X-CYBER
OUTER ROTOR MOTOR
HAIR CLIPPER SET HC796

IF YOU NEED A MORE DETAILED
MULTILINGUAL MANUAL VERSION
(US/CA/EU/UK/JP), PLEASE SCAN THE
FOLLOWING OFFICIAL QR CODE



SCAN & GET EXTRA WARRANTY



SUPRENT After-sales Service:
support@suprent.com

■ IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE.
Follow all safety precautions and instructions in this manual.

⚠ WARNING

To reduce the risk of electric shock, injury, fire, death, and property damage, please observe the following safety precautions:

- Never leave the product unattended while it is plugged in.
- This product is not intended for use by persons (including children) with physical, sensory, or mental disabilities, or those lacking experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure they do not play with the product; otherwise, accidents or personal injury may occur.
- Use this product only as described in this manual.
- This product is intended for hair trimming only; do not use it for any other purpose.
- Do not use this product if the power cord or plug is damaged, if it is not working properly, if it has been dropped or damaged, or if it has fallen into water.
- This product contains a built-in rechargeable battery. Do not throw it into fire or expose it to heat. Do not charge, use, or leave it in high-temperature environments, as this may cause overheating, fire, or explosion.
- Never drop or insert any object into any opening of the device.
- Do not use this product where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this product with damaged or missing comb teeth, or a damaged blade, as injury may occur.
- Always attach the power cord to the device first, then to the outlet. To disconnect, turn all controls to the "OFF" position, then remove the plug from the outlet.
- Do not touch both terminals on the product with metal objects

- and/or body parts simultaneously to avoid a short circuit. Keep the product away from children; failure to comply may result in fire or serious personal injury.
- When cleaning, always unplug the power adapter from the household power outlet; otherwise, electric shock or personal injury may occur.
- Regularly wipe the power plug, power cord plug, and charging base socket with a dry cloth to prevent dust accumulation. Failure to do so may lead to insulation failure caused by moisture, resulting in a fire.
- Keep the product dry. Do not immerse the product in water or wash it with water. Do not place the product over or near a sink or bathtub filled with water; otherwise, electric shock or fire due to short circuit may occur.
- Do not damage, modify, forcefully bend, pull, or twist the power cord. Additionally, do not place heavy objects on or squeeze the power cord; otherwise, electric shock or fire due to short circuit may occur.
- Do not use any device other than the supplied power cord and charging base to charge this product. Furthermore, do not use the supplied power cord and charging base to charge other products, as this may lead to burns or fire due to short circuit.
- Plug the charger or charging cable directly into an outlet; do not use an extension cord.
- If the temperature is outside the recommended charging range (10°C–35°C), charging time may be extended or the product may fail to charge properly.
- Do not store the product within reach of children or infants. Do not allow them to touch or operate the product, as they may accidentally swallow components such as blades or lubricant containers, which may cause accidents or personal injury.
- If the specialized lubricant is accidentally swallowed, do not induce vomiting. Drink plenty of water and seek medical attention immediately. If the lubricant gets into the eyes, rinse immediately with running water and seek medical attention.
- Properly dispose of the product's packaging bags and keep them away from infants and young children to avoid the risk of suffocation.
- Do not modify or attempt to repair the product or the battery pack yourself, except as indicated in the instructions for use and maintenance.

■ PRECAUTIONS FOR WASTE BATTERY RECYCLING AND DISPOSAL

- This rechargeable battery is for use with this product only. Do not use it in other products.
- Do not charge the battery once it has been removed from the product.
- Do not heat the battery or throw it into fire.
- Do not hit, disassemble, modify, or scratch the battery with fingernails.
- Do not connect the positive and negative terminals of the battery with metal objects.
- Do not carry or store the battery with metal jewelry such as necklaces or hairpins.
- Do not use or leave the battery in high-temperature environments (such as direct sunlight or near other heat sources).
- Do not peel off the battery casing, as this may lead to overheating, fire, or explosion.
- After removing the rechargeable battery, keep it out of reach of children and infants. Accidental swallowing may cause injury; if this occurs, seek medical attention immediately.
- If battery electrolyte leaks and comes into contact with the eyes, do not rub the eyes. Rinse thoroughly with clean water (such as tap water) and seek medical attention immediately.

■ STORAGE REQUIREMENTS

 
 
- Do not store this product in environments below 10°C or above 35°C. Do not expose the product or battery to extreme temperatures to avoid damage or safety risks.

■ EXPLANATION OF SYMBOLS


- The following symbol indicates: a specific detachable power supply unit is required to connect this product to the power source. The model identification of the reference power supply unit is marked next to the symbol.



SPECIFICATIONS

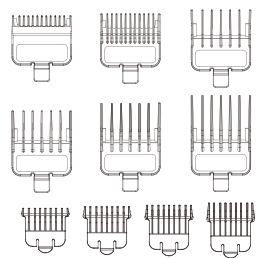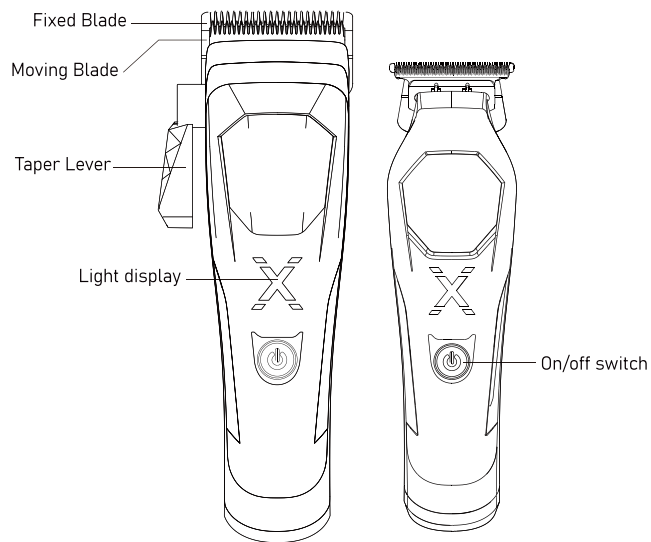

Guide Combs × 10

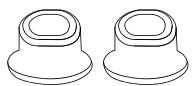 


Charging stand × 2



Cleaning Brush



 Oil

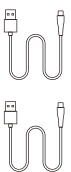

USB-C cable × 2

BASIC PARAMETERS



Noise Level: ≤70dB



Charging Interface: USB-C



Speed: 8,000 RPM



Battery Type : Lithium-ion Battery

Power Input : DC 5V 1A

Battery Capacity : Clipper 3200mAh; Trimmer 2000mAh

Charging Time : Clipper Approx. 250 min; Trimmer Approx. 160 min

Running Time : Clipper Approx. 190 min; Trimmer Approx. 180 min

USING INSTRUCTIONS

Press the power button to turn on the device. The digital display will light up, showing the real-time battery percentage.

When the battery is low, the upper light of the "X" symbol on the hair clipper/trimmer turns off.

During charging, the "X" symbol on the hair clipper/trimmer flashes. When fully charged, the "X" symbol stays steadily on.

Press the power button to power on the unit. The digital display will illuminate and show the real-time battery percentage.

When the battery level is low, the upper indicator of the "X" symbol on the clipper/trimmer will turn off.

While charging, the "X" symbol indicator on the clipper/trimmer will flash. Once fully charged, the "X" symbol indicator will remain steadily lit.

The product supports two charging methods:

Connect the USB-C cable directly to the hair clipper/trimmer.

 
Connect the USB-C cable to the charging stand, then place the device on the stand.

ADJUST THE TAPER LEVER

The taper lever on the clipper adjusts the length of the hair remaining. The adjustment range includes 0.5, 1, 1.5, 2, and 2.5 mm (Figure 1).

For longer hair: Slowly push the taper lever down.


For shorter hair: Push the taper lever up.

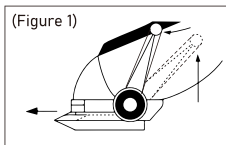

GUIDE COMB INSTALLATION

To Install: Align and secure the top of the guide comb to the blade head, then attach the comb bottom to the blade head base by magnetic force (Figure 2).

 To Remove: Pull the bottom of the guide comb away from the blade first, then lift it off the blade head (Figure 3).

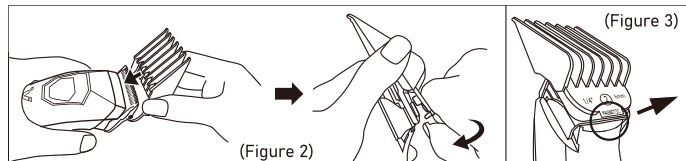


CLIPPER BLADE REPLACEMENT AND ADJUSTMENT

- 1) Turn off the clipper and push the taper lever upward to the top position.
- 2) Remove the screws and the fixed blade. Keep the screws in a safe place.
- 3) Remove the moving blade from the oscillating plastic holder and replace it with a new one (Figure 4).
- 4) Reattach the fixed blade with the screws, tightening them lightly at first.
- 5) Adjust the blade gap to between 1 mm and 2 mm. Ensure the moving blade is centered and parallel to the teeth of the fixed blade (Figure 5).

Important Tip: The top edge of the fixed blade must be at least 1 mm higher than the edge of the moving blade. This is critical to prevent the moving blade from touching or cutting the skin. Always apply a few drops of lubricating oil to the blades before use. Fully tighten the screws once the blades are aligned.

 
If you still have problems, please contact the SUPRENT Support Team at support@suprent.com for instructional videos.

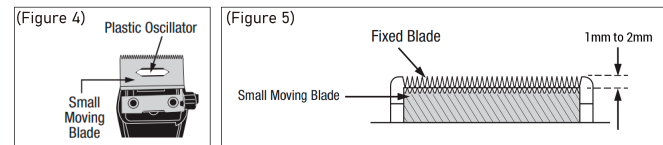

TRIMMER BLADE GAP ADJUSTMENT

- 1) Use a screwdriver to loosen the two screws on the fixed blade (Figure 6), then remove the blade assembly from the trimmer body.
- 2) Use a screwdriver to remove the two small screws on the moving blade (Figure 7).
- 3) Adjust the position by pushing the black plastic part on the moving blade (Figure 8) until the edge of the moving blade is recessed slightly below the fixed blade.
- 4) The teeth of the moving blade should sit approximately 1 mm below the upper edge of the fixed blade teeth (Figure 9). Improper alignment may cause nicks or cuts.
- 5) CAUTION: Do not let the moving blade extend beyond the fixed blade, as this will cause skin cuts.
- 6) Gently tighten the two screws on the moving blade. If the adjustment is unsatisfactory after testing, repeat the process.

 
If you still have problems, please contact the SUPRENT Support Team at support@suprent.com for instructional videos.

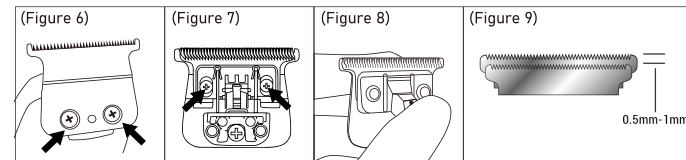

BLADE LUBRICATION PROTOCOL

For the best cutting performance, we highly recommend oiling the blades after every use.

 - 1) Open the oil bottle.
 - 2) Remove the blade guard.
 - 3) Hold the oil tube at a 45° angle and apply 5 drops of oil directly to the center of the blade (Figure 10).
 - 4) Turn on the clipper for 10 seconds to distribute the oil evenly.
 - 5) Wipe off any excess oil with a lint-free cloth.
- Important Tip: It is recommended to replace the blade once a year for optimal cutting performance.

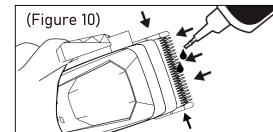

CLEANING INSTRUCTIONS

To maintain optimal performance, clean the unit after each use. Use the included cleaning brush to remove hair debris from the blades. Remove the guide combs. They may be rinsed under running water; ensure they are completely dry before storage or use.

Note: Lubricate the blades after cleaning to maintain peak performance.

ECO-FRIENDLY PACKAGING

SUPRENT advocates for responsibility toward the Earth and society. We believe that existing resources should be professionally recycled and repurposed to create new value, thereby preventing landfill accumulation and environmental pollution. As a result, SUPRENT uses recycled paper and soy-based inks for all our packaging, contributing to environmental protection and sustainable development.

WARRANTY AND SERVICE

From the date of purchase, the product's main components are covered by a 1-year limited warranty (accessories excluded).

Warranty coverage is void for product malfunctions caused by accidental damage, unauthorized repairs, improper storage, or other human-induced damage.

For any issues, please contact the SUPRENT Support Team at support@suprent.com