



IF YOU NEED A MORE DETAILED
MULTILINGUAL MANUAL VERSION
(US/CA/EU/UK/JP), PLEASE SCAN THE
FOLLOWING OFFICIAL QR CODE.



SCAN & GET EXTRA WARRANTY



SUPRENT After-sales Service:
support@suprent.com

 
SUPERIOR ENTICING

More than a skill, barbering is a fusion of
artistry, dedication, and dreams.
We're here to empower cuts and sculpt
visions into reality.


THE FANGS

PROFESSIONAL HAIR CLIPPER HC975


PACKAGE INCLUDED

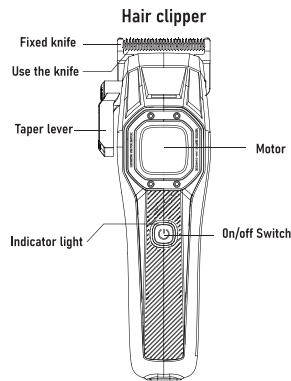

Accessories:

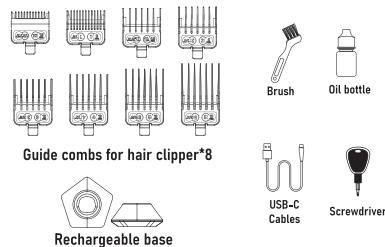 

BASIC PARAMETERS

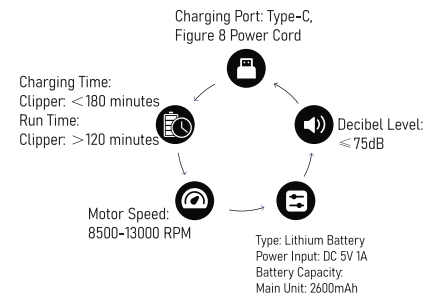 

PRODUCT DESCRIPTION

Precaution

Please read this instruction manual carefully
before use and keep it for future reference.

1. Never leave the product unattended when
plugged in.
2. Except for charging, please unplug the
product immediately.
3. Do not pull, twist, or tangle the power cord
on the device.
4. Keep the power cord and product away
from hot surfaces.

5. Do not place or store the product where it
can fall or be pulled into a bathtub or sink. Do
not drop into or immerse in water or other
liquids.
6. Do not use the product while bathing or
showering.
7. Do not use the product if it is damaged or
has fallen into water and does not work
properly.
8. Never insert any object into any opening of
the appliance.
9. Use the product only for its intended
purpose as described in this manual. Do not
use attachments not recommended by the
manufacturer. Do not use an extension cord
to operate the product.
10. Do not use this appliance outdoors, or in
areas where aerosol (spray) products are
being used or where oxygen is administered.
11. Do not use this product if the blades are
chipped or damaged, as this may cause cuts.
Before each use, make sure that the blades
are properly aligned and oiled.
12. Close supervision is necessary when the
appliance is used on or near children, or by
persons with reduced physical, sensory or
mental capabilities, or disabilities.
13. Keep the lubricant oil out of reach of
children and pets.

POWER SWITCH INSTRUCTIONS

1. On/Off & Locking

To Turn On/Off: Press the power button briefly.
To lock: To lock the device, press and hold the
power button for 3 seconds while it's off. The
red and green lights will flash alternately for
2 seconds.
To unlock, press and hold the button for more
than 3 seconds.
Important: The device cannot be locked while
it's charging.

2. Light Control

Turn on the light: When the device is on, press
and hold the power button for 2 seconds.
Turn off the light: You can turn the light off in
two ways:
- Press and hold the button for another 2
seconds.
- Briefly press the button to turn the device
(and light) off.

INDICATOR LIGHTS

During Use:

Solid Green: 80%-100% battery
Solid Yellow: 20%-80% battery
Flashing Red: 0%-20% battery

While Charging:

Flashing Red: 0%–20% charged
Flashing Yellow: 20%–80% charged
Flashing Green:80%–99% charged
Fully Charged: Solid Green

CHARGING INSTRUCTIONS

- * Before using the clippers for the first time or after a long period of disuse, fully charge them.
- * Use a power adapter with an input voltage no higher than **5V** and **1A**.
- * Do not handle the power plug with wet hands to avoid electric shock.
- * To prevent damage that could lead to electric shock, a short circuit, or fire, do not pull on the power cord.
- * If the device or power cord is damaged, stop using it immediately and replace it.
- * Only use the **original power cord** to charge this device. Using it to charge other models may cause an accident.

GUARD COMBS INSTALLATION & REMOVAL

To Install: Align the top of the guard comb with the blade and secure its position. Then, firmly snap the bottom of the guard comb into the bottom of the blade.

To Remove: Pull the bottom of the guard comb away from the blade and then lift the comb off.

CLEANING AND MAINTENANCE

To keep your clippers in top condition, you should clean them after every use.

- 1.Use the included brush to clean any hair from the blades.
- 2.The guide combs can be rinsed under running water, but be sure to dry them completely before storing them.
3. Do not rinse the blades.

Important : The blades must be cleaned and oiled regularly to function properly. Failing to do so will void the warranty. Do not rinse the blades under water.

Oiling the Blades

Oiling your blades after every use is highly recommended for optimal cutting.

- 1.Before the first use, snip off the end of the oil tube with your clippers.
- 2.Remove the blade guard and turn on the device.
- 3.Hold the clippers at a 45-degree angle. Gently squeeze the oil tube to place two drops of oil directly onto the blade.
- 4.Let the device run for a few more seconds to spread the oil along the blade.

5.Turn off the clippers and wipe off any excess oil with a cloth before using them.

Note: Failing to regularly clean and oil the blades will void your warranty. Replacing the blade head once a year is recommended for better performance.

Overheating

Generally, clippers may get warm after about 40 minutes of continuous use. If this happens, turn them off and let them cool down. If the temperature feels unusually high, stop using the device immediately and contact customer service.

CLIPPER BLADES INSTALLING AND REMOVAL

 
If your clippers are making excessive noise or you need to replace the blades, follow these steps:

- 1.Turn the clippers off and adjust the taper lever.
2. Unscrew and remove the fixed blade. Keep the screws in a safe place.
3. Take the small moving blade off the plastic shaker and replace it with a new one.
- 4.Reattach the fixed blade, but only tighten the screws lightly for now.

Important Blade Alignment:

- The top edge of the fixed blade must be at least 1/32" (1mm) higher than the top edge of the moving blade and centered. This is crucial for preventing the blades from cutting too close to the skin.
- Once the blades are aligned correctly, be sure to tighten the screws securely. Before using the clippers, add a few drops of oil to the blades.


Following these steps will ensure your clippers cut smoothly and safely. If you still have trouble, you can email support@suprent.com for a detailed instruction video.

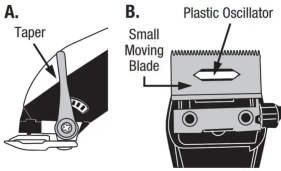

HOW TO ADJUST THE TAPER LEVER

The taper lever on the side of your clippers controls the length of the hair you're cutting, with a range from 0.5 mm to 2 mm.

 - 1.To cut longer hair, slowly push the taper lever down.
- 2.To cut shorter hair, push the lever up.

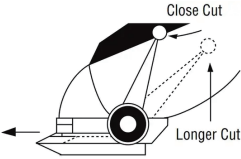

ECO-FRIENDLY PACKAGE

SUPRENT advocate being responsible for the earth and society and hope that available resources can be recycled to give value again by professional treatment, thus preventing the earth from waste heaping and environmental pollution. Therefore SUPRENT uses secondary recycled paper and soy-based inks on all of our packages and blisters to make a contribution to environmental protection and sustainable development.

WARRANTY AND SERVICE

Warranty Description

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

If you have troubles, please contact SUPRENT Support Team support@suprent.com.