



SUPERIOR ENTICING

More than a skill, barbering is a fusion of
artistry, dedication, and dreams.
We're here to empower cuts and sculpt
visions into reality.

THE FANGS

PROFESSIONAL HAIR CLIPPER HC976

IF YOU NEED A MORE DETAILED
MULTILINGUAL MANUAL VERSION
(US/CA/EU/UK/JP), PLEASE SCAN THE
FOLLOWING OFFICIAL QR CODE.




SCAN & GET EXTRA WARRANTY




SUPRENT After-sales Service:
support@suprent.com

PACKAGE INCLUDED


Hair clipper

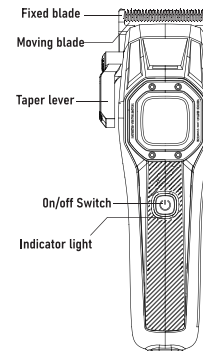


Hair trimmer

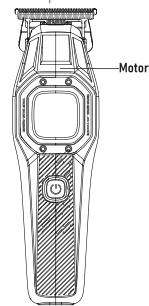


Accessories:

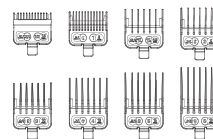

Hair Clipper Guards*8

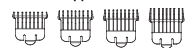 

Hair Trimmer Guards*4

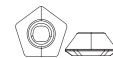 

Charging Docks*2




Brush Oil bottle



USB-C Cables*2 Necklace Screwdriver

BASIC PARAMETERS

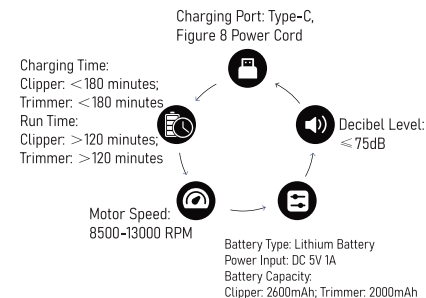

PRODUCT DESCRIPTION

Precaution

Please read this instruction manual carefully
before use and keep it for future reference.

1. Never leave the product unattended when plugged in.
2. Except for charging, please unplug the prout immediately.
3. Do not pull, twist, or tangle the power cord on the device.
4. Keep the power cord and product away from hot surfaces.

5. Do not place or store the product where it can fall or be pulled into a bathtub or sink. Do not drop into or immerse n water or other liquids.
6. Do not use the product while bathing or showering.
7. Do not use the product if it is damaged or has fallen into water and does not work properly.
8. Never insert any object into any opening of the appliance.
9. Use the product only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate the product.
10. Do not use this appliance outdoors, or in areas where aerosol (spray) products are being used or where oxygen is administered.
11. Do not use this product if the blades are chipped or damaged, as this may cause cuts. Before each use, make sure that the blades are properly aligned and oiled.
12. Close supervision is necessary when the appliance is used on or near children, or by persons with reduced physical, sensory or mental capabilities, or disabilities.
13. Keep the lubricant oil out of reach of children and pets.

POWER SWITCH INSTRUCTIONS

1. On/Off & Locking

To Turn On/Off: Press the power button briefly.
To lock: To lock the device, press and hold the power button for 3 seconds while it's off. The red and green lights will flash alternately for 2 seconds.
To unlock, press and hold the button for more than 3 seconds.
Important: The device cannot be locked while it's charging.

2. Light Control

Turn on the light: When the device is on, press and hold the power button for 2 seconds.
Turn off the light: You can turn the light off in two ways:
- Press and hold the button for another 2 seconds.
- Briefly press the button to turn the device (and light) off.

INDICATOR LIGHTS

During Use:

Solid Green: 80%–100% battery
Solid Yellow: 20%–80% battery
Flashing Red: 0%–20% battery

While Charging:

Flashing Red: 0%–20% charged
Flashing Yellow: 20%–80% charged
Flashing Green:80%–99% charged
Fully Charged: Solid Green

CHARGING INSTRUCTIONS

- * Before using the clippers for the first time or after a long period of disuse, fully charge them.
- * Use a power adapter with an input voltage no higher than **5V** and **1A**.
- * Do not handle the power plug with wet hands to avoid electric shock.
- * To prevent damage that could lead to electric shock, a short circuit, or fire, do not pull on the power cord.
- * If the device or power cord is damaged, stop using it immediately and replace it.
- * Only use the **original power cord** to charge this device. Using it to charge other models may cause an accident.

GUARD COMBS INSTALLATION & REMOVAL

To Install: Align the top of the guard comb with the blade and secure its position. Then, firmly snap the bottom of the guard comb into the bottom of the blade.

To Remove: Pull the bottom of the guard comb away from the blade and then lift the comb off.

CLEANING AND MAINTENANCE

- To keep your clippers in top condition, you should clean them after every use.
- 1.Use the included brush to clean any hair from the blades.
 - 2.The guide combs can be rinsed under running water, but be sure to dry them completely before storing them.
 3. Do not rinse the blades.

Important : The blades must be cleaned and oiled regularly to function properly. Failing to do so will void the warranty. Do not rinse the blades under water.

Oiling the Blades

- Oiling your blades after every use is highly recommended for optimal cutting.
- 1.Before the first use, snip off the end of the oil tube with your clippers.
 - 2.Remove the blade guard and turn on the device.
 - 3.Hold the clippers at a 45-degree angle. Gently squeeze the oil tube to place two drops of oil directly onto the blade.
 - 4.Let the device run for a few more seconds to spread the oil along the blade.

5.Turn off the clippers and wipe off any excess oil with a cloth before using them.

Note: Failing to regularly clean and oil the blades will void your warranty. Replacing the blade head once a year is recommended for better performance.

Overheating

Generally, clippers may get warm after about 40 minutes of continuous use. If this happens, turn them off and let them cool down. If the temperature feels unusually high, stop using the device immediately and contact customer service.


CLIPPER BLADES INSTALLING AND REMOVAL

- If your clippers are making excessive noise or you need to replace the blades, follow these steps:
- 1.Turn the clippers off and adjust the taper lever.
 2. Unscrew and remove the fixed blade. Keep the screws in a safe place.
 3. Take the small moving blade off the plastic shaker and replace it with a new one.
 - 4.Reattach the fixed blade, but only tighten the screws lightly for now.

Important Blade Alignment:

- The top edge of the fixed blade must be at least 1/32" (1mm) higher than the top edge of the moving blade and centered. This is crucial for preventing the blades from cutting too close to the skin.
- Once the blades are aligned correctly, be sure to tighten the screws securely. Before using the clippers, add a few drops of oil to the blades.

Following these steps will ensure your clippers cut smoothly and safely. If you still have trouble, you can email support@suprent.com for a detailed instruction video.

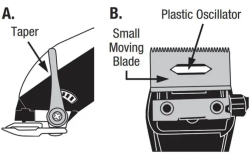


HOW TO ADJUST THE TAPER LEVER

The taper lever on the side of your clippers controls the length of the hair you're cutting, with a range from 0.5 mm to 2 mm.

- 1.To cut longer hair, slowly push the taper lever down.


2.To cut shorter hair, push the lever up.

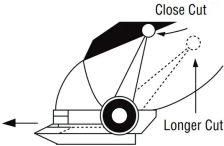

ZERO-GAP BLADE ADJUSTMENT

- To adjust your blades for a zero-gap setting, follow these steps:
1. Use a screwdriver to loosen the two small screws on the fixed blade.
 2. Gently place the tip of the blade on a flat surface until the moving blade is flush with or slightly below the fixed blade.
 3. Ensure the blades are correctly aligned. The teeth of the moving blade should be about *1mm* below the top edge of the fixed blade. If they aren't, you risk cutting or scratching the skin while trimming.

4. Make sure the moving blade does not extend past the fixed blade, as this could also cause cuts.
5. Once the blades are at your desired zero-gap position, gently tighten the two screws on the fixed blade. If you are not satisfied with the adjustment after testing, simply repeat the process.

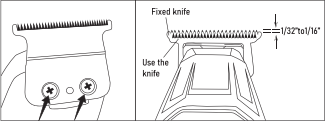

ECO-FRIENDLY PACKAGE

SUPRENT advocate being responsible for the earth and society and hope that available resources can be recycled to give value again by professional treatment, thus preventing the earth from waste heaping and environmental pollution. Therefore SUPRENT uses secondary recycled paper and soy-based inks on all of our packages and blisters to make a contribution to environmental protection and sustainable development.

WARRANTY AND SERVICE

Warranty Description

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

If you have troubles, please contact SUPRENT Support Team support@suprent.com.